



SP601

Installation & Service Manual

SP601 (1.5kW, 2.0kW & 3.0kW)

Models: Q601AU-15, Q601AU-20, Q601AU-30
Q601AU-15T, Q601AU-20T, Q601AU-30T
(T= timeclock models)



The SP601 controller can be installed and configured in a number of ways. Information for the initial setup, troubleshooting and after sales service of the product is detailed for use by pool builders and approved service agents.

For further information please contact your representative or Davey Water Products.

DEPEND ON
DAVEY

WATER PRODUCTS

Davey Water Products Pty Ltd
Member of the GUD Group
ABN 18 066 327 517

Head Office and Manufacturing
6 Lakeview Drive,
Scoresby, Australia 3179
Ph: +61 3 9730 9222
Fax: +61 3 9753 4100
Website: davey.com.au

Customer Service Centre
Ph: 1300 367 866
Fax: 1300 369 119
E-mail: sales@davey.com.au

Interstate Offices
Sydney • Brisbane • Adelaide
Perth • Townsville

International
6 Lakeview Drive,
Scoresby, Australia 3179
Ph: +61 3 9730 9121
Fax: +61 3 9753 4248
E-mail: export@davey.com.au

USA
Website: daveyusa.com
E-mail: export@davey.com.au

**Davey Water Products
– New Zealand**
7 Rockridge Avenue,
Penrose, Auckland 1061
Ph: +64 9 570 9135
Fax: +64 9 527 7654
Website: daveynz.co.nz
E-mail: sales@daveynz.co.nz

Davey Spa – New Zealand
2 Rothwell Avenue,
North Harbour, Auckland 0632
Ph: +64 9 415 8622
Fax: +64 9 415 8621
Website: spa-quip.co.nz
E-mail: service@spa-quip.co.nz

Contents

SP601 Description	3
Model Variations	4
Installation Guide	5
Dip Switch Settings	5
PCB Sockets	5
SP601 Specifications and Outlet Loading	6
Q601-30 3.0kW version	7
General Installation Instructions	7
Plumbing	7
Electrical	8
System Components	9
Water Detection	9
Thermal Cut-out	9
Temperature sensor	10
Installing an In Pool Temperature Sensor	11
Spa Power Variable Colour Light (SPVCL)	11
Spa Power Single Colour Light (SPSCL)	12
Spa Power Variable Speed Blower (SPVSB)	12
Circulation Pump	12
Plumbing for Circulation Pumps	13
Ozone Systems	14
AMP Plugs	15
Diagnostics	16
Troubleshooting	18
Part Replacements	19
Heater Tube	19
Water Sensor	20
Circuit Board	21
In Element Temperature Sensor	22
Frequently Asked Questions	22
Warranty Information	23
Identification	24
Part Numbers for Spares Ordering	24
Contact Details	25

Appendix

Wiring Diagram
Ozone Installation Diagram
User Guide

SP601 Description

The SP601 is a microprocessor based spa pool controller capable of implementing the many features of an intermediate level spa pool. It offers the user complete control of the following equipment via a poolside control panel:

- 1 x single pump + Aux load OR 1 x two speed pump
- Variable speed blower (if Aux load not fitted)
- Small 24hr circulation pump *
- Ozonator *
- LED pool light
- Pool temperature
- Heating mode
- Filtration cycle
- Clean up cycle


* These are controlled automatically, so no user controls are provided.

In addition sleep times can be programmed via an optional, control box mounted clock.


Inside every SP601 is a 1.5kW, 2.0kW or 3.0kW flouropolymer coated element, an over temperature cut-out device, a temperature sensor, a water sensor, and a controller circuit board which includes an isolating transformer. To install the unit, a power supply and digital switch are needed along with a suitable pump to circulate water through the heater.

Initial setup of the unit can be as simple as setting the target pool temperature. The unit's sleep time, filtration function and heating mode can also be adjusted, if desired, refer to the User Manual for full details.

Further customisation of the unit can be achieved by adjusting the 'Dip switch' settings, which are located on the controller circuit board. Features such as load shedding (less / more), temperature sensor location (heater / pool), main pump (1spd / 2spd), circulation pump (none / fitted) can be altered at the flick of a switch. Refer to the setup guide in the appendix. The pool builder / installer must ensure these settings match the actual set up of the system.

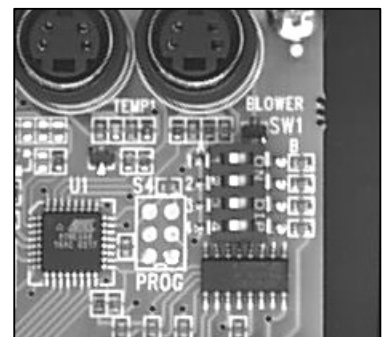


Each SP601 normally comes with a temperature sensor that is fitted to the heater assembly. Alternatively an optional in-pool temperature sensor can be fitted instead. The in-pool temperature sensor provides more accurate control of the pool temperature and is effected less by variations in operating conditions (See the temperature sensor section for more detail.) Both temperature sensors incorporate a solid-state digital sensor that is accurate to 0.5°C. Only one sensor can be connected at a time and the temp sense DIP switch must be set appropriately to tell the controller which is fitted.

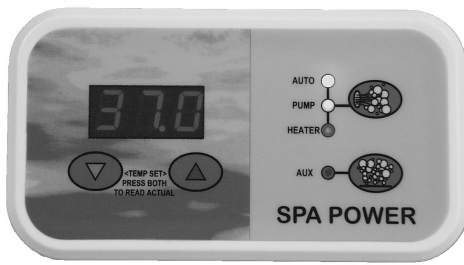

The water resistant poolside control panel features a moulded or webbed waterproof membrane and a polycarbonate overlay that is resistant to pool chemicals. It contains an alarm beeper, soft touch keys and a three digit LED temperature display. All user controls are on this panel except sleep time adjustments, which can be done using the optional sleep control clock that may be fitted to the control box itself.

Model Variations

The improved design of the SP601 means that all the output sockets are included in every model. The model numbers are explained below.

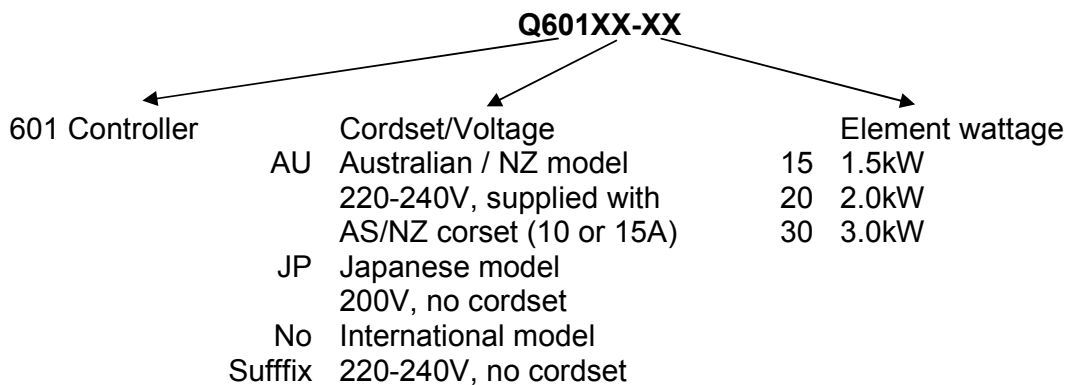

The output sockets are described below, please note that not all outputs can be used at the same time.

Pump 1 This pump is normally used to power the pool's jets and circulate water through the filter and heater. The controller will run this pump automatically as required when in auto mode. Alternatively, this pump can also be run manually using the touch pad. Either a 1 speed pump or a 2 speed pump can be connected to this socket, either pump will use the same AMP plug. Use the DIP switch settings to set the main pump outlet for a 1 or 2 speed pump. If a circulation pump is installed, Pump 1 will revert back to a simple on/off or high/low/off pump under user control.

Aux or Ozone (2spd pump) The options for an auxiliary load will depend on Pump 1. If a 2spd pump is installed (without a circ pump) this socket will be used to run an ozonator. If a 1spd pump is used and no SPVSB is fitted, then this output can be switched, allowing the installation of an auxiliary on/off pump or blower, etc.

SPVSB This socket is always powered (except for error conditions) and so can only be used for a Spa Power Variable Speed Blower (SPVSB).

Circ A small circulation pump can be installed which will circulate water through the heater, filter and ozonator. This will be used instead of Pump 1 to automatically heat and filter the pool water. This is typically run for 24 hours a day but a sleep timer can limit this time to increase pump life and reduce running costs. If this pump is installed, the circ pump DIP switch must be set to yes (fitted).

Ozone (Circ Pump) Use this socket to connect an ozonator if a circ pump is installed, regardless of Pump 1 type.

Ozone (1spd Pump) If a 1spd pump is installed as Pump 1 and there is no circ pump installed, the ozonator should be connected to this socket.


Use the table to see where the ozonator should be installed.

Pump 1	One Speed		Two Speed	
Circ	None	Fitted	None	Fitted
Fit Ozonator to this socket	Ozone (1spd)	Ozone (circ)	Aux	Ozone (circ)

Installation Guide

Refer to “SP601 Setup Guide” in the appendix for complete instructions.


Dip Switch Settings

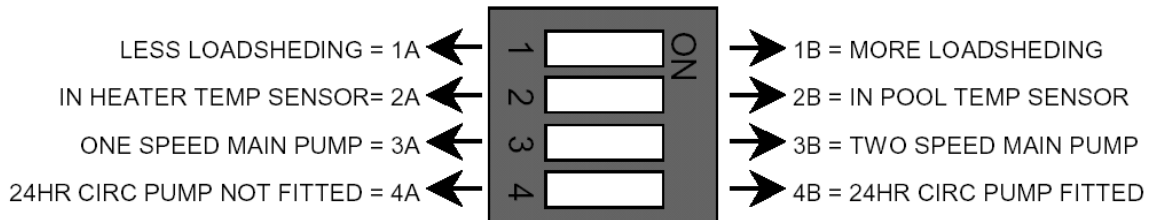

PCB Sockets

There are three round “mini-din” connectors situated at the top right of the SP601 PCB. They are provided so that optional equipment (SPVCL, temp sensor, SPVSB) may be connected to the system during installation or at a later date. It is important that the power to the SP601 be disconnected when connecting or disconnecting any peripheral equipment to reduce ESD or transient damage to the equipment and also to reduce the risk of electrocution.


Note that only one temperature sensor should be connected at any time. Either an ‘in-heater’ temp sensor or an ‘in-pool’ temp sensor but not both at the same time.

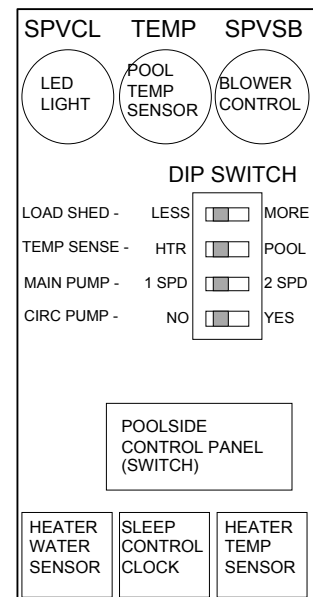

SP601 Specifications and Outlet Loading


Specifications	
SP601 dimensions	360mm x 220mm x 95mm
Heater tube pipe diameter	50mm
Heater pressure, max (head of water)	300kPa (30m)
Temp – max controlled	41.5°C
Temp – thermal cut out	50°C +/- 3°C
Temp – max ambient	40°C
Mains cord length	5m
Rectangular Pool side touchpad – face	118mm x 65mm x 6mm
Rectangular Pool side touchpad – body	92mm x 40mm x 17mm
Rectangular Recommended switch hole	See diagram
Oval Pool side touchpad - face	112mm x 49mm x 4mm
Oval Pool side touchpad - body	88mm x 22.5mm x 19mm
Oval Recommended switch hole	See diagram
Switch lead length	3m
Supply requirements (Max total loading)	
1.5kW models	220-240V, AC, 50-60Hz, 10A
2.0kW models	220-240V, AC, 50-60Hz, 15A
3.0kW models	220-240V, AC, 50-60Hz, 15A
Max Outlet Loading 1.5kW, 2.0kW & 3.0kW	
Pump socket	220-240V, AC, 50-60Hz, 10A
Aux socket	220-240V, AC, 50-60Hz, 10A
SPVSB	220-240V, AC, 50-60Hz, 7.5A
Circ	220-240V, AC, 50-60Hz, 2.5A
Ozone	220-240V, AC, 50-60Hz, 2.0A

To prevent early system failure the sum of the outlet loadings and heater at any time should not exceed the 'Max total load'. Use the loading calculator to check the system in question.

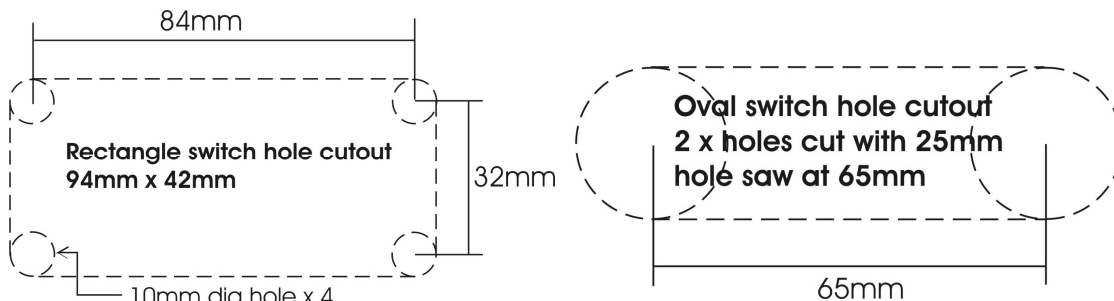

Q601-30 3.0kW version

Care must be taken when installing a 3.0kW version of the SP601 controller. The system is designed as 15A max. The element will draw 12.5A of current (at 240V) leaving only 2.5A for a pump to flow water through the heater tube. For this reason the DIP switch settings must be:

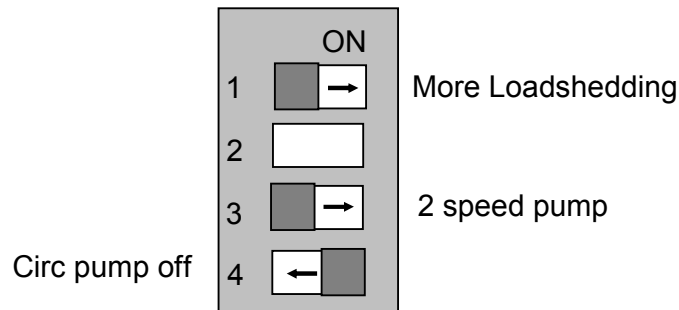

The temp sensor can be either in element or in pool. With these DIP switch settings the heater will only operate with the pump in low speed, keeping the system to 15A max. If any other load is turned on, SPVSB or pump on high speed, the element will turn off. The choice of two speed pump is limited to 2.5A on low speed. The pump and heater currents can be out of phase, meaning that a pump with a current rating of 3A running with a heater of 12.5A may be inside the 15A limit. To be sure, measure the current with an ammeter. For this reason all of Spa-Quip's two speed pumps will be suitable in this configuration.

General Installation Instructions

Plumbing

1. The heater should be plumbed so the water flows past it from left to right when horizontally mounted and bottom to top when vertically mounted. **IMPORTANT:** If mounted vertically, the water sensor **MUST** be at the top.
2. When connecting pipework to the heater make sure the 'O' rings are properly seated in the mac union fitting. Hand tighten only. Using tools will distort the fittings. Care must be taken to ensure that all joins are inline, otherwise leaks may occur.
3. Make sure the controller is mounted securely so that vibration is minimised.
4. It is recommended that the pipework has shut off valves so the controller and pump can be removed for service without loss of water.
5. Pressure test the installation to check for leaks.
6. Support all pipework to prevent sagging and to prevent movement when pumps turn on or off.
7. Insulate all pipework to decrease heat loss.

Refer to the 'Circulation pump' and 'Ozone system' sections of this manual for information regarding the installation of those systems.


Electrical

1. The spa pool must be connected to a suitable weather protected supply, equipped with a double pole isolating switch, which is of the correct rating and complies with the local wiring regulations. When installing refer to your local wiring code. In particular refer to ECP2 and ECP25 (AS / NZ). Or EN 60364-4-1 and EN 60364-7-1 (EU). The system must be installed in such a way that live parts are not accessible by a person in the pool.
2. Ensure the system is protected by an RCD.
3. It is recommended that signal and power wiring be separated to prevent interference and that the unit is supplied from a dedicated power circuit.
4. Loop wires before they enter the unit to prevent water running down them and into the unit.
5. Check all connections are correct and tight.
6. Check that the unit and supply are not overloaded. Use the loading calculator for details.


System Components

Water Detection

A water detection system is used to tell the controller when the heater tube is flooded with water and therefore when it is safe to turn the element on. Water detection is achieved by optical means, where an optical bolt (water sensor) is mounted in the element assembly. Inside the optical bolt is a light source and a light detector.

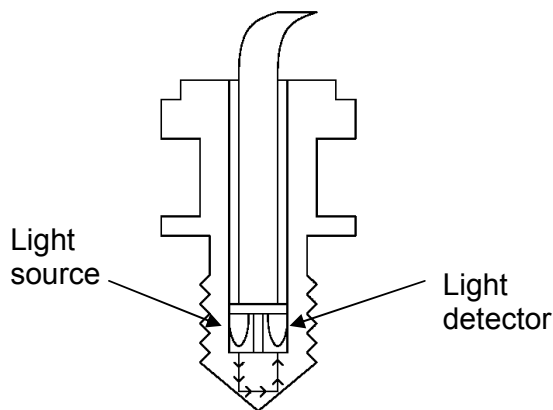

When the tip of the optical bolt is surrounded by air, the light emitted by the light source is reflected back to the light detector as the tip acts like a mirror.

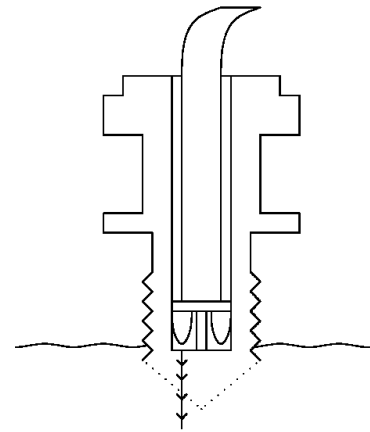

The mirroring effect of the tip is lost once submerged and the detector receives no light.

The optical bolt has many advantages over traditional pressure switches and flow switches; there are no moving parts or adjustments required. Once installed, it is very robust and offers a long service life. The optical bolt is also less sensitive to collecting hair and debris. However care must be taken to ensure that air is not trapped in the heater tube during normal operation. This is especially important when low flow rate pumps are used (e.g. low flow circulation pumps), as they may not produce sufficient water flow to clear air from the heater tube. See the 'Circulation pump' section for more information.

The water sensor is connected to the SP601 PCB. Additional circuitry is included on the PCB to check that the water sensor is connected and is functioning correctly.

Thermal Cut-out

Each SP601 contains a thermal cutout device (also known as a klixon). It is an electro-mechanical device that acts as a switch. When it is heated above $50^{\circ}\text{C} \pm 3^{\circ}\text{C}$ it switches off creating an open circuit. When it cools below 38°C it switches on and creates a short circuit.

It is placed in series with the heating element and tightly coupled (thermally) to the brass element boss. The element will then be switched off if the brass element boss gets too hot.

There is also an associated electronic detection circuit that is used to sense if power is getting to the element. If the thermal cutout has operated the circuit will sense a lack of power and the controller will fault (Error 6). The controller will not attempt to recover from this condition, it will need to have the power turned off and back on again to clear the fault once the thermal cutout has cooled below 38°C.



Temperature sensor

The SP601 comes with a temperature sensor built into the element assembly which communicates with the controller via a data link. It is housed in a tubular pocket that extends into the heater tube's water flow. The temperature sensor is sealed into the pocket and plugs into the SP601 PCB. This sensor configuration is known as 'in-heater' temperature sensing.



'In-heater' temperature sensing is the most convenient method of sensing the pool's water temperature as it is built into the controller, however it is not the most accurate. It will generally provide good temperature regulation of the pool if used in conjunction with a high flow rate pump and good pool insulation.

A large hysteresis is required if an In Heater sensor is used. Here the pump and element are turned on when the sensed temperature is below the target temperature by the hysteresis amount and turned off when up to temperature. A large hysteresis is required because the water in the heater will cool down when the pump is off at a different rate to the main body of water in the pool. If the pipe work is poorly insulated the system can cycle rapidly (thermally) resulting in the pump & element turning on and off frequently thus shortening equipment life and irritating the user. If the pipe work or pool cabinet is well insulated, the heater does not cool down much below the pool temperature and can result in poor temperature control of the pool.

A better method exists. It is called 'in-pool' temperature sensing. In this method a temperature sensor is mounted in the pool shell so that it is able to directly sense the pool water temperature. This is a far more accurate method of detection and allows the use of tighter hysteresis in the temperature control software. It is much less affected by differing insulation designs and ambient temperatures.


'In-pool' temperature sensors use the same digital temperature sensing device as the 'in-heater' sensors. For accurate sensing of the pool water the digital sensor in the 'in-pool' sensor needs to be tightly coupled (thermally) to the pool water and insulated from any other ambient temperature effects i.e. under skirt ambient. This is achieved by mounting the sensing device to a stainless steel disk and then packing the case of the sensor with insulation. Additional closed cell foam insulation (supplied) must then be placed around the sensor when mounted in situ.

Installing an In Pool Temperature Sensor

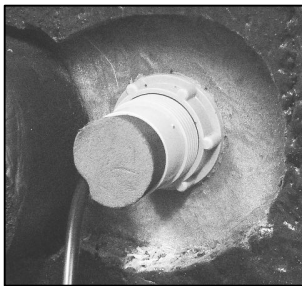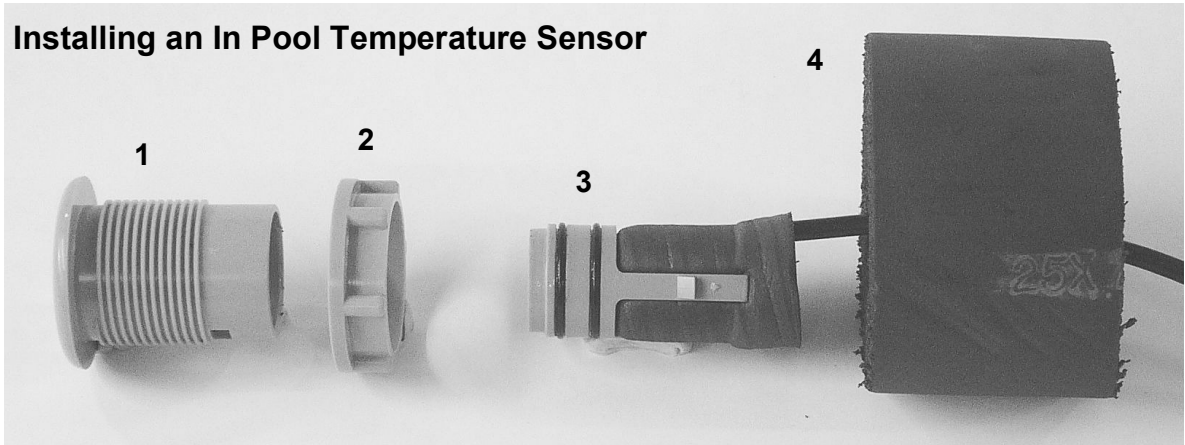

The new design of In Pool temperature sensor installs in the same manner as the existing products. Fit the body (number 1 in the diagram) into the hole in the shell and secure with the locking ring (2). Use silicone or similar for a water proof seal. Slide in the sensor slug (3) into the body, there should be enough silicone grease to make it water tight. It is important that the foam plug is pushed as far as it will go into the body.

Fit the large foam insulation over the entire assembly. The finished installation should look like the picture on the right, with the sensor insulated from the undershirt ambient temperature. This will help give an accurate measurement of the water temperature.

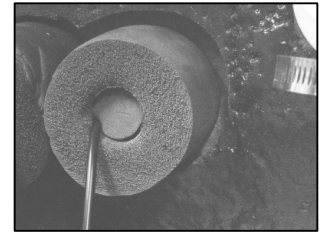

Spa Power Variable Colour Light (SPVCL)

All SP601 controllers can operate one 'Spa Power Variable Colour Light' (SPVCL). Utilising the latest in efficient LED lighting technology, the SPVCL offers long life and a range of vibrant colours to make any pool look stunning. The SPVCL is controlled via the controller's poolside touchpad. Installation is as per a standard 2.5 inch pool light.

Features

- Energy efficient design. Maximum 12V power drawn is approx 1W
- Light output exceeds that of a typical 9W bulb using filter lenses
- Typical LED life of 50,000hrs to 100,000hrs compared to a normal incandescent bulb life of between 5,000hrs to 15,000hrs
- Energy efficient design means the SPVCL runs far cooler than a normal bulb
- Perfectly matched primary colours support smooth colour mixing



Spa Power Single Colour Light (SPSCL)

For an alternative lighting option, a blue or white coloured light is available. This will install and operate in the same way as its variable colour cousin.

Spa Power Variable Speed Blower (SPVSB)

All SP601 controllers can control one 'Spa Power Variable Speed Blower' (SPVSB). The SP601 will automatically sense that a SPVSB has been plugged in and will make the variable speed functionality available on the touch pad.



The cleverly designed SPVSB has been produced to accompany the latest Spa Power range of controllers. It contains all the required speed control circuitry and simply plugs into a controller for both power feed and speed control. The SPVSB is then controlled via the controller's poolside touchpad, and the user can control the airflow in the pool simply by pressing a button.

SPVSBs are available in two models: with or without a fitted power supply. Those without (Q5602-XXX) are intended for use only with a Spa Power controller. Where as those with a power supply (Q5603-XXX) can be used either with a controller or in a stand-alone configuration with their own dedicated touchpad.

Circulation Pump

The use of small circulation pumps that run for long periods of time with low flow rates is becoming more common in the spa pool industry. These pumps are used to circulate water through the pool's filter, heater and ozone systems and offer low power usage and silent operation. They are generally between 80W and 375W and have flow rates of up to approx 200l/m.

All SP601 controllers have been designed to operate in conjunction with small circulation pumps but care must be taken to ensure that the following points are considered.

1) Air must not collect in the heater tube.

The water detector may sense any air trapped in the heater tube, causing the controller to think the heater tube is empty and resulting in it faulting with 'Err 1 Prime Failed'. Also froth in the heater tube may still activate the water sensor while failing to cool the element boss, resulting in thermal cut-out operation (Error 6).

2) There must be sufficient water flow through the heater tube.

If the water is not flowing through the heater tube fast enough then the heat energy will build up in the water and will lead to large temperature rises and at worst will cause the thermal cutout to activate. This will lead to an Error 6 condition and the controller will beep. The controller will then need to be switched off and back on once the heater tube water temperature has dropped below 38°C. The thermal cutout will automatically reset below this temperature.

The thermal cutout is set to operate at $50^{\circ}\text{C} \pm 3^{\circ}\text{C}$. This gives a maximum allowable element boss temperature of 47°C . If the pool is set to 41.5°C there is room for a maximum water temperature rise of 5.5°C . From this requirement the pump must be carefully matched to the size of the element. If the pump is too weak, the unit may fail under thermal cutout condition (Er6).

Heating water with low flow rates may cause the layer of water in contact with the element to boil. As the water boils it changes state and produces bubbles. These bubbles must be able to escape from the heater tube or they may gather and finally be detected by the water sensor causing a no water error.

Due to the temperature rise caused by low flow rates, it is advised that an 'in-pool' temperature sensor be used. This will provide the required accurate temperature control of the pool.


When using an injector to introduce ozone gas into the circulation pump's water circuit, it is necessary to consider the water flow rates, both in the heater tube and the ozone injector. It is also important to situate the injector 'down stream' of the controller for air bubble reasons. See 'Ozone systems' for more detail. In order to maintain sufficient water flow it is recommended that an injector bypass system be implemented.

Plumbing for Circulation Pumps

It is essential that no air bubbles can collect in the heater tube.

The following plumbing configurations have proven to be helpful.

- Use step down offset adapters, like that shown on the right hand side of the diagram over the page, do not use those shown on the left. This will allow any air to flow out of the heater tube and not collect around the water sensor or...
- Mount the controller on a slight incline so that the water outlet is raised. This will aid the air to flow out of the heater tube.
- Plumb the controller with 45° or 90° 50mm elbows (facing up) then step the pipe down to the required diameter.

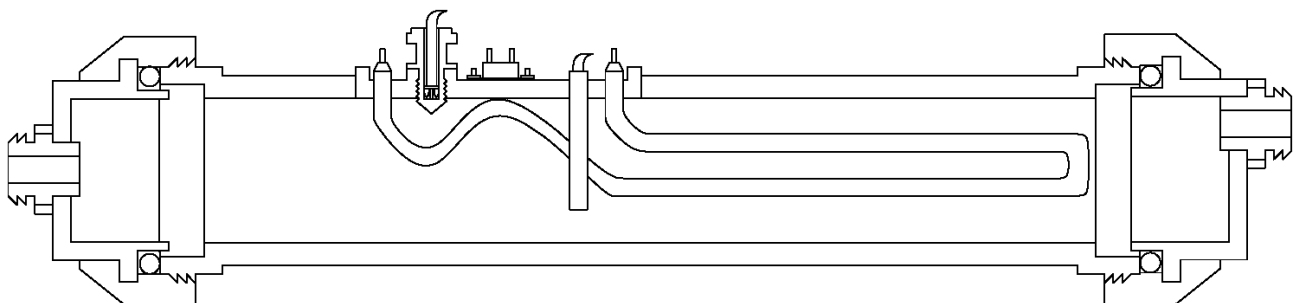

X

Sectioned drawing of a heater tube with two different outlet adapters

✓

Other circulation pump tips


- Like all equipment, circulation pumps have a limited service life that is affected by the environment that they work in. If a pump is used 24hrs/day it will wear out faster than if it were used 12hrs/day. On SP601-T models the circulation pump is turned off when the system is asleep. This feature may be used to extend the circulation pump's life.
- Circulation pumps are designed for low flow rates so they have small impellers that are easily blocked. Be careful not to allow debris to enter the pump when changing a filter or use the pump without a filter.
- Due to low flow rates, it is recommended that a skimmer type spa filter be used to allow the pump to remove floating matter from the pool's surface.
- Make sure the pump is not starved for water flow as cavitation and/or air locking can occur.

Ozone Systems

All SP601 controllers are equipped with a choice of ozonator outlet sockets. The correct socket must be used to ensure the ozonator comes on when the appropriate pump is running. This will provide ozonation of the pool water during the filtration period. See 'Model Variations' for more details.

Ozone background information

- Ozone does not affect the pH balance.
- Ozone reduces total dissolved solids in water.
- Ozone helps to reduce the amount of chemicals required to treat a pool.
- Ozone kills bacteria, viruses, cysts, yeast, moulds, and mildew.
- Ozone is a gas that is generated from fresh air and is dissolved into the pool water.
- Ozone has more oxidising potential than chlorine gas and bromine.
- Ozone can be generated by UV light or corona discharge (CD). Corona discharge uses a high voltage to produce a spark. Generally CD ozonators produce more ozone than UV ozonators. Both types have a limited service life.

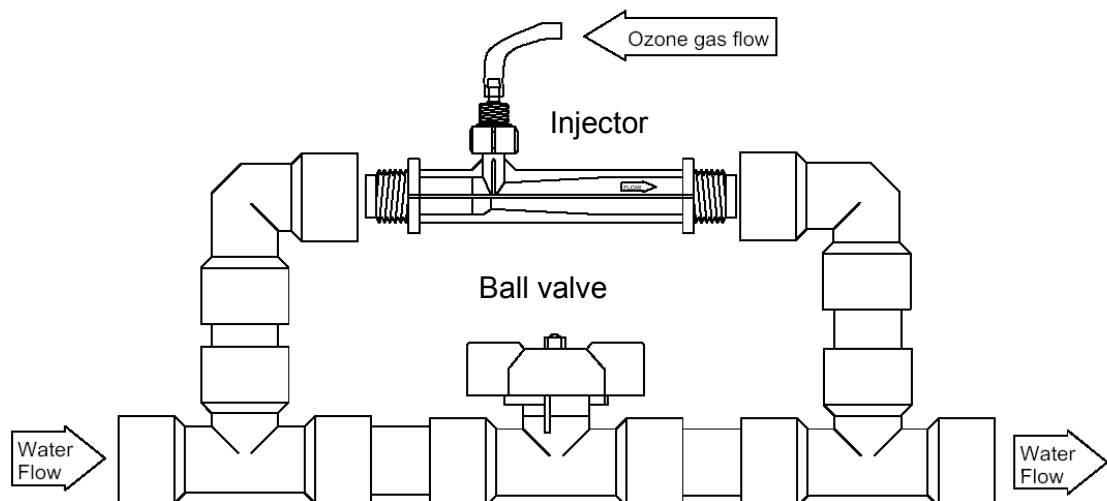

When using an injector to introduce the ozone gas into the water, it is recommended that a water by-pass be used parallel with the injector. See diagram above. A by-pass

will allow the water flow rate through the injector to be tailored (by adjusting the ball valve) so that the correct ozone gas flow and therefore gas to water mixture is delivered. It will also ensure the water flow rate through the heater is maximised. Refer to your ozonator's installation instructions for more information.



The best use of any generated ozone gas, is to dissolve it into the water and try to keep it dissolved in the water as long as possible.

Tips:

- A low water flow rate through the injector produces a low gas flow rate and results in higher ozone gas concentration and better ozone absorption into the water.
- Also a low injector water / gas flow rate produces small fine bubbles that are suspended in the water. This is better than large bubbles that rise straight to the pool's surface and let the gas escape.
- Ozone production is dependant on the condition of the air fed into the ozonator. Try to keep the air clean, dry and cool. Try to pipe the air into the ozonator's input from outside the spa shell.
- Be careful of ozone when in the gaseous state as it will damage unsuitable plastics very quickly.
- Ozonators (UV and CD) have a service life. This can be prolonged if they are not used 24hrs a day. Most CD systems producing 50mg/hr of ozone gas need to run for about 4-8hrs per day at most to treat the water.
- Some ozonators require a minimum air flow rate to cool the ozone unit. Refer to your ozonator's instructions for more detail. Some ozonators require the injector to produce a slight suck when blocked off with a finger whereas others require a specific flow rate that can be estimated by timing the injector sucking water out of a bottle.

AMP Plugs

All SP601, SP800 and SP1200 controllers are fitted with AMP style connectors. All peripheral equipment can be ordered with AMP cordsets for use with these controllers. Each cordset will have an identifying label on the side. It is important that the locking mechanism is engaged on the AMP plug to secure the connection and to protect against mechanical vibration and water ingress. The plug is pushed home and the plastic tabs engage onto the socket as shown on the right. All plug and socket pairs should have a silicone gasket seal to protect against water and any socket without a plug should have a bung as shown in the picture on the right.

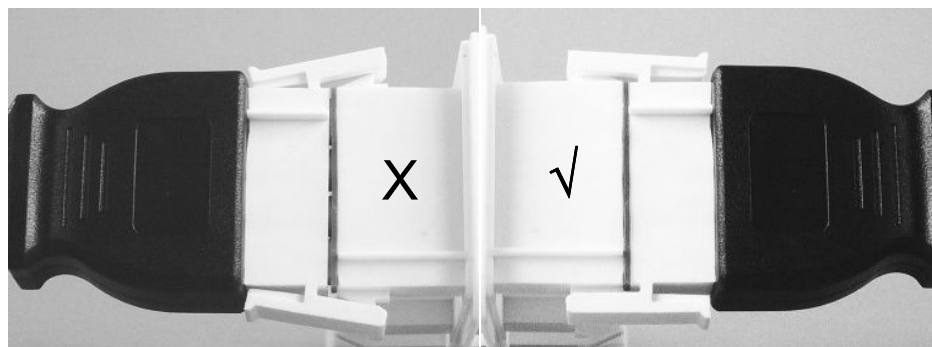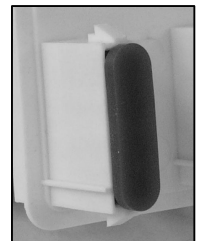

Diagnostics

The SP601 controller has extensive self-diagnostic capabilities. In the event of a problem it will sound an alarm (beep) and indicate an error number according to the nature of the problem. Pushing the Air/Aux button will mute the alarm but if left alone it will stop after four minutes. The error numbers and their meanings are listed below.

Error 1 (H2O) = PRIME FAILED

This is a special case in that it is not a latching error. It is not necessarily a problem with the SP601 itself but indicates that no water is being detected in the heater. The LED display will show "H2O". Pressing the Pump button will run the pump associated with the heater (Pump1 or Circ Pump) for 10 or 60 seconds respectively, to try to flood the heater tube. Normal operation will resume if successful. If unsuccessful, Error 1 (H2O) will be indicated again.

- *Check valves and jets are open correctly, filters are not blocked, pumps are working and that there is enough water flow through the heater tube.*
- *Check that air is not trapped in the heater tube. See the 'Circulation Pump' section.*
- *Check for leaks (water or air) in pipework, O-rings, seals and loose fittings. If there is air around the water sensor the controller will think the heater is empty. This may occur if there is a small leak so that the water drains out of the heater over time.*
- *If there is water flow then the water sensor may be dirty or faulty. Remove and inspect, replace if necessary. Check the water sensor to circuit board connection for water, corrosion or fouling.*
- *When all other options have been exhausted change the circuit board.*

Error 2 is not used.

Errors 3-8 are latching errors.

Operation will stop and will not continue until the controller is reset (switched off and on again at the main power supply).

Error 3 = STUCK BUTTON

This error indicates that one of the buttons in the control panel is stuck or has been held down for more than one minute. This may be caused by water getting into the panel or by damage to the control panel or its cable, or by the pool cover pressing on the touchpad.

- *Inspect the control panel for damage; test the operation of each button by checking that they all feel the same.*
- *Check the control panel to main circuit board connection and the cable itself for any damage or corrosion.*
- *Disconnect the control panel and run the controller for one minute. If it cuts out on Error 3, then the problem is in the controller.*
- *When all other options have been exhausted change the main circuit board.*

Error 4 = NO WATER SENSOR

This error indicates a problem with the optical water sensor in the heater. It may be caused by the sensor being disconnected or by damage to the sensor.

- *Check the water sensor to circuit board connection for water, corrosion or fouling.*
- *Remove the water sensor and inspect, replace if necessary.*
- *When all other options have been exhausted change the circuit board.*

Error 5 = OVERTEMPERATURE

This error indicates that the digital temperature sensor in the heater or pool has detected a temperature of 45°C or more. This is not necessarily a problem with the SP601 itself. It might be caused by excessive pump use during hot weather. In this case reduce the filtration time and increase the sleep time.

- *Check that another source of heat is not heating the pool excessively. Look at pumps operating for long durations, solar heating, heat pumps, lighting etc.*
- *Check that the ambient temperature is not above or close to 45°C.*
- *If an in heater temperature sensor is used check that there is adequate water flow through the heater. Check that the filter and pump are not blocked and that the jets and valves are open.*
- *Measure the pool temperature and verify the controller's reading. If the controller has an in heater sensor then circulate the water for a few minutes first. If the controller is reading an incorrect temperature then the temperature sensor may be damaged or faulty. Connect another sensor and check that the controller is operating correctly. If it is then change the temperature sensor, if not change the circuit board.*

Error 6 = THERMAL CUTOUT TRIPPED

This error indicates that the safety electromechanical over temperature cutout on the heater has operated. This is not necessarily a problem with the SP601 itself. It may have been caused by high temperatures during shipping or by disconnection or failure of the pump. Waiting for the heater to cool below about 38°C and switching the power off and on again will clear this error.

- *Check valves are open correctly; pumps are working and that there is adequate water flow through the heater tube.*
- *Check that filters are clean and jets are open.*
- *Check thermal cutouts in pumps and other equipment. (Run pump directly from mains to see if it over heats and cuts out.).*
- *Check all connections in the controller are tight and clean.*
- *Make sure air cannot collect in the heater tube. Refer to the 'Circulation Pump' and/or 'Ozone' sections of this manual when using these systems.*
- *When all options have been exhausted change the circuit board.*

Error 7 = STUCK RELAY

This error indicates a problem with the heater control circuitry inside the unit.

- *Check that there are no short circuits across the relay terminals or associated wiring.*
- *Check that all internal wiring is correct and that terminals are tight and clean.*
- *When all options have been exhausted change the circuit board.*

Error 8 = NO TEMPERATURE DATA

This error indicates a problem with the digital temperature sensor in the heater or pool. It might be caused by the sensor being disconnected or by damage to the sensor or cable.

- *Make sure there is only one sensor plugged into the circuit board. Either 'in-heater' or 'in-pool' sensor not both.*
- *Check the temperature sensor to circuit board connection for water, corrosion or fouling.*
- *Connect another sensor and check that the controller is operating correctly. If it is then change the temperature sensor, if not change the circuit board.*

Troubleshooting

1) The clock won't keep time.

- *Check that the power is always connected to the SP601.*
- *Check the clock is plugged into the SP601 PCB and check the connection for corrosion.*
- *The clock is faulty and needs to be returned for service.*

2) The thermal cutout keeps tripping.

- *Check that there is adequate water flowing through the heater tube and that the plumbing is not blocked.*
- *Check that filters are clean and jets are open.*
- *Check thermal cutouts in pumps and other equipment.*
- *Turn the power supply to the unit off and allow the unit to cool. Turn the power back on.*
- *Check the pump is not heating the pool. A large pump running continuously will heat the pool until the power to it is cut.*
- *If a small circulation pump is in use check there is enough flow through the heater tube and that air is not collecting in the heater tube. Try to measure the flow from the circ pump outlet jet. This can be done by holding a hose on the jet's outlet and timing how long it takes to fill a bucket. Aim for more than 40 L/m. i.e. it should take no longer than 30 seconds to fill a 20 litre bucket.*
- *The unit is faulty and needs to be returned for service.*

3) The unit won't power up.

- *Check there is power to the unit and that the control panel is plugged in correctly.*
- *Check the control panel for damage or corrosion. Try another control panel.*
- *Check all connections are correct, tight and clean.*
- *Replace the unit.*

4) The unit leaks.

- *First ascertain where the leak is.*
- *Mac-unions. Check that there are O-rings in the mac-unions. Check that the unions are tight, aligned and not distorted.*
- *Heater tube. Inspect the water sensor body for cracks and O-ring location. Tighten or replace if necessary. Tighten the element boss screws to compress the O-ring.*
- *Replace the heater tube if required.*

5) The RCD or Ground Fault Device keeps tripping out.

- *Check for shorts to earth and loose, dangling wires. Check the element earth leakage. Try disconnecting equipment piece by piece until you can identify what is causing the fault.*
- *Check that the RCD is not also an overcurrent circuit breaker. If it is, make sure it is rated for motor start up surges and is not overloaded.*
- *Make sure the unit is not drawing too much current from the supply – see loading calculations.*
- *Check for damage to wiring, pumps, blowers, and lights.*
- *Check for leaks around live parts.*
- *Check earth connections.*
- *Check the supply is wired correctly.*

- *Some older switchboard ELCBs are not compatible with EMC filtered equipment and must be replaced.*
- *The ELCB may be faulty and require replacement.*

6) My pool is getting too hot.

- *Check that another source of heat is not heating the pool excessively. Look at pumps operating for long durations, solar heating, heat pumps, lighting etc.*
- *In extreme climatic conditions where there is a high ambient temperature the normal operation of the unit and pump can cause the pool to over heat. To counter this, remove the pool cover over night to allow the pool to cool. Be sure the pool is safe to leave uncovered. Consider access by children, animals etc.*
- *Increase sleep time and minimise filtration time.*

Part Replacements

Every precaution has been taken to insure the highest quality and reliability is delivered in each SP601. However in the unlikely event that something does go wrong, it is normally a simple operation to replace the faulty section of the controller or the entire controller if necessary.

To avoid unnecessary part replacement it is important that the fault be diagnosed correctly. Refer to the diagnostics and trouble shooting sections before attempting to change any parts. Only authorised service agents should attempt to change parts.


Most problems are caused by something obvious so remember to check the obvious first: connections, power supply, pumps, water flow, and leaks...

Refer to the wiring diagram when checking connections.

Heater Tube

Removal


Disconnect from the supply. Close the water valves so that the unit can be removed without draining the pool or causing a flood. Loosen the locking rings on the mac-unions and disconnect the pipe work (don't loose the O-rings). Note the connections in the unit so that they may be disconnected and reconnected later on.

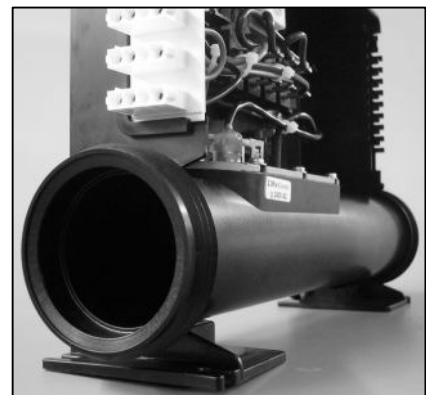

Disconnect the heater tube wiring using a pair of pliers to grip each terminal in turn– don't pull on the wire itself. Disconnect the two wires from the thermal cut out, disconnect the earth wire, disconnect the element phase and neutral wires and unplug the water sensor and temperature sensor. Unscrew the two mounting screws that locate the heater tube in place so that it can be removed.

Installation

Installation is the reverse of removal, but remember to soak up any water in the unit. Check the replacement element is the same rating as the old one and check the connections are correct and tight. (Refer to the appropriate wiring diagram) Turn the water back on, bleed air from pipe work and reconnect power. Check the operation of the unit and check for leaks.

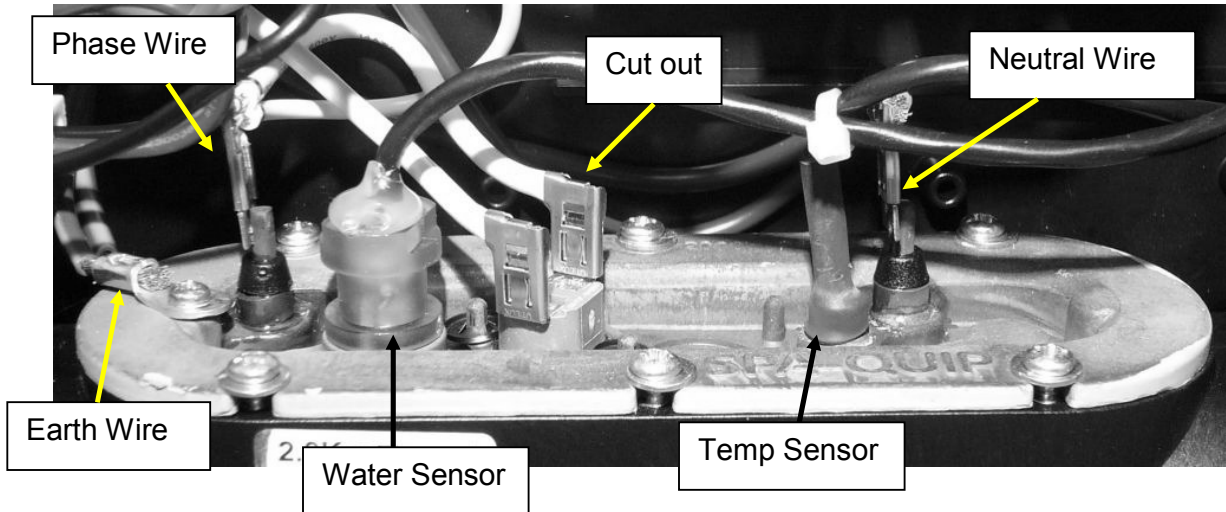

Water Sensor

Removal

Disconnect from the supply. Isolate the water supply and drain the heater tube so that the water sensor can be removed without draining the pool or causing a flood. Cut the cable ties on the sensor's leads and disconnect the plug from the circuit board. Unscrew the sensor from the element boss.

Installation

Lubricate the water sensor O-ring with a little silicon grease if it is not already lubricated. Slide the O-ring over the water sensor and screw the water sensor into the element boss until the O-ring is seated inside the recess and the sensor body starts to tighten up on the O-ring or boss. Then back the sensor off $\frac{1}{4}$ of a turn. This will insure that the water sensor's body is not in contact with the element boss and is not under too much tension. If the water sensor is over tightened or it's body is hard up against the element boss it will crack and leak.



Plug the sensor into the circuit board and cable tie the leads into place. Soak up any water in the unit, reconnect the water, bleed air from pipe work and reconnect power supplies. Check the operation of the unit and check for leaks.

Circuit Board

Taking anti-static precautions.

The main anti-static precaution to take is to make sure your body is at the same electric potential as the circuit board. To do this **first disconnect the power**, then touch the neutral terminal on the mains terminal block. Now you can handle the circuit board.


Removal

Disconnect from the supply. Note where each wire is connected on the circuit board and relays. Disconnect all wires, the cable ties will hold the wires in position for reassembly so don't cut them. When disconnecting terminals, use a pair of pliers to grip the terminals, not the wire, and then pull the terminal off. Remove all of the six screws that hold the circuit board to the housing and lift the circuit board out of the unit.

Installation

Taking antistatic precautions as above, screw the circuit board into place using the six screws. Reconnect all wires and check that all connections are correct and tight. (Refer to the appropriate wiring diagram) Reconnect the power to the unit.

Reset the set temperature and filtration as desired. If a new circuit board is fitted, check the dip switches are set correctly.

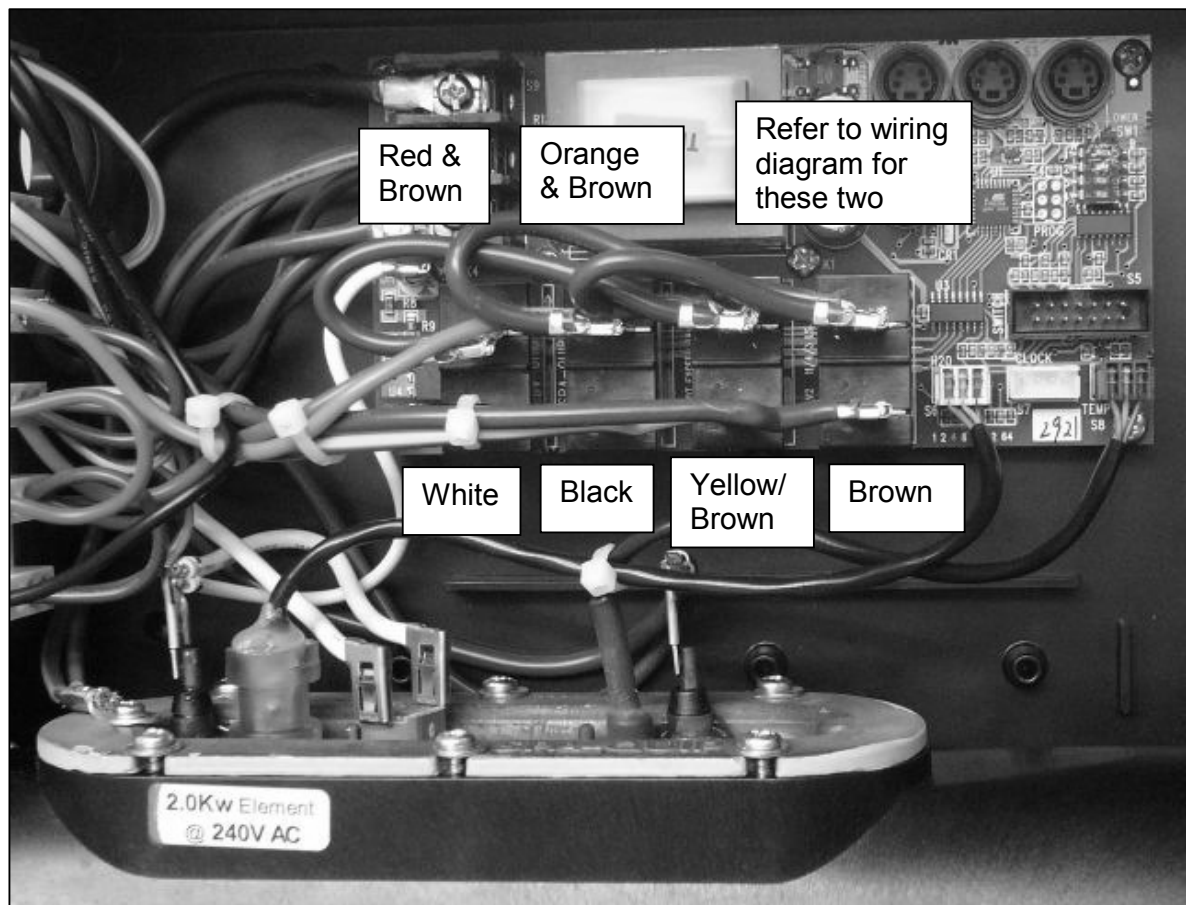

In Element Temperature Sensor



Removal

Unplug from the PCB and the sensor should pull out from the element boss. The heatshrink may hold on to the metal but it will wiggle free.

Installation

Insert the sensor all the way into the element pocket and use a sleeve of heatshrink tubing (or similar) to hold the sensor in place and to seal the pocket. The pocket must be sealed to ensure that the sensor is reading the water temperature accurately and is not affected by the enclosure temperature.

Frequently Asked Questions

1) Can I make it load shed?

Yes, refer to the dipswitch settings information in the installation guide for your model – see the appendix.

2) Can I mount the SP601 on its side?

Yes, the SP601 can be mounted so that its heater tube is vertical with the water sensor at the top. The water must flow from the bottom of the tube to the top. This will force out all air in the tube. Note that an in pool temperature sensor is recommended in this configuration, especially if a small circulation pump is used.

3) Can I mount the SP601 on it's back / front / upside down?

No, any of these mounting positions will cause the water detection system to operate incorrectly.

4) Can I run a standard incandescent pool light from the SP601?

Yes, but it must be used with a separate transformer and controlled by the Aux outlet.

Warranty Information

SPA-QUIP product warranty for Australia and New Zealand.

The Spa-Quip warranty is very simple and is designed to protect your purchase over the first two years, as follows. The first 12 months after purchase there is a full in-field warranty cover on faulty parts or workmanship. Over the following 12 months there is a bench warranty. The product must be returned, freight paid, to Spa-Quip where it will be repaired at no cost and returned to you free of charge. A bench warranty does not include the cost of local service people to remove or re-install the equipment.


Terms and conditions.

- 1 This warranty applies to all states and territories of Australia and New Zealand only and is subject to the provisions of the Trade Practices Act (Aust), the Goods and Consumer Protection Legislation of the various Australian states and the Consumers Guarantee Act 1993 (NZ) as applicable.
- 2 The warranty period commences on the date of original purchase of the equipment. Evidence of this date of original purchase must be provided when claiming repairs under warranty. It is recommended you retain all receipts in a safe place as failure to provide proof of purchase will result in warranty being refused.
- 3 This warranty is subject to due compliance by the original purchaser with all directions and conditions set out in the installation and Operating Instructions. Failure to comply with these instructions, damage or breakdown caused by fair wear and tear, negligence, misuse, incorrect installation, water in the control enclosure or element, chemical or additives in the water, inadequate protection against freezing, rain or other adverse weather conditions, corrosive or abrasive water, lightning or high voltage spikes or though unauthorised persons attempting repairs are not covered by this warranty. The product must only be connected to the voltage shown on the nameplate and with a correctly rated cable.
- 4 Without limiting the original purchaser's entitlement under the Trade Practices Act (Aust), the Goods and Consumer Protection Legislation of the various Australian states or the Consumers Guarantee Act 1993 (NZ), Spa-Quip shall not be liable for any loss of profits or any consequential, indirect or special loss, damage or injury of any kind whatsoever arising directly or indirectly from the product or defect.
- 5 Replaceable, wearing items such as pump seals, filter cartridges, light bulbs etc. are not covered by this warranty.
- 6 Equipment used for working displays or demonstration is not covered by this warranty.

Identification

Each SP601 has a unique serial number, it is attached next to the circuit board and on the unit's lid label.

The PCB also has a version number, job number and software version number. The job number is hand written and the software version number is found by adding up the crossed out numbers. For example in the picture the job number is 2318 and the numbers 2 and 8 have been crossed out indicating the software version is 10.

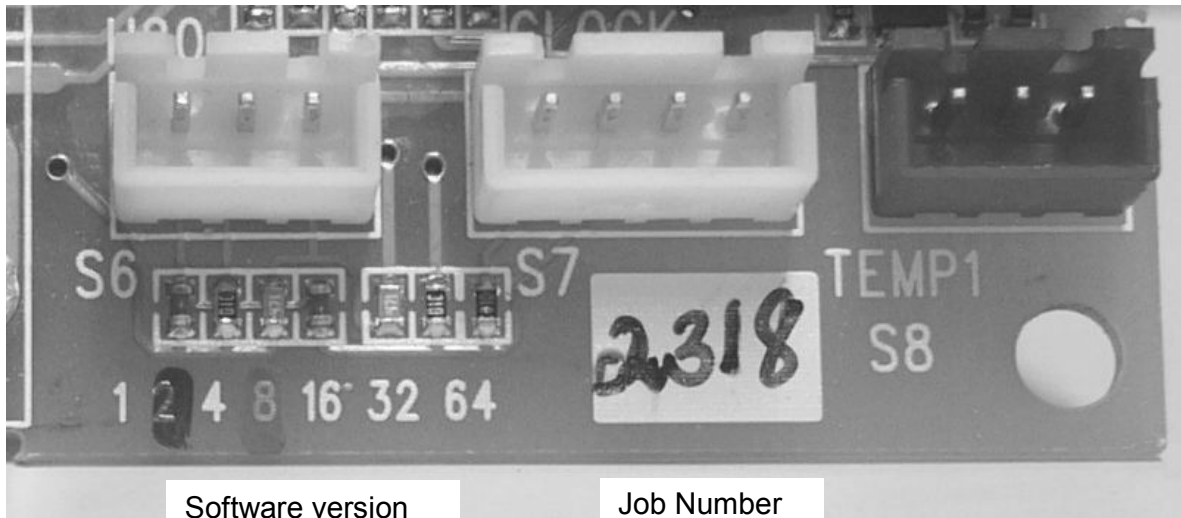

The element power rating is identified by a sticker on the side of the heater tube and is also stamped into the element boss.

Part Numbers for Spares Ordering

Description	Part number
Digital sleep clock	Q921011
SPVCL	Q3704
SPSCL	Q3705
SPVSB	Q5602-AMP
Heater tube element assembly 1.5kW	Q80061 (Q80061T with tube)
Heater tube element assembly 2.0kW	Q80062 (Q80062T with tube)
Heater tube element assembly 3.0kW	Q80063 (Q80063T with tube)
SP601 controller circuit board, all models	Q846601 Please specify model no.
SP601 switch, all models	Q71092 (rectangular) Q71093 (oval)
Water sensor	Q915441A
In-pool temperature sensor	Q915445
In element temperature sensor	Q915439
Wiring harnesses	Q927083