




How to upgrade your spa using an in.stik!




Here are the steps to upgrade an in.xe, in.xm or any Y series packs using an in.stik.



IMPORTANT NOTE: Changing the software of the spa will erase the memory so the clock, filtration, economy settings will be erased.

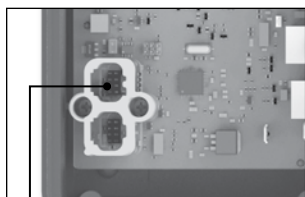

in.yj communication connector

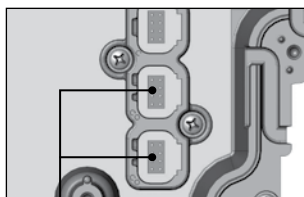

in.ye & in.yt communication connectors

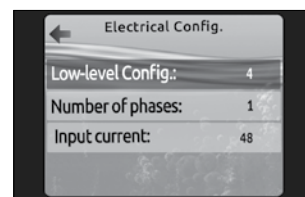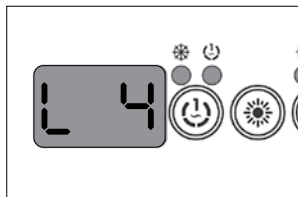

in.k800 & in.k500


1. All external peripherals, such as the in.mix, in.stream, in.touch and in.clear, need to be disconnected from the communication connectors before performing an update.

2.a First check the low level of the spa by powering down the spa and then back up. When the pack boots-up, it shows consecutively the software number followed by the software revision number and the low level selected. Make sure you remember the low level, which you will need at the end.


2.b First check the spa low level by going into Settings menu and then Electrical configuration (in.k800) or Config (in.k500). The low level config. is indicated on the field Low-Level Config (in.k800) or Config # (in.k500). Make sure you remember the low level, which you will need at the end.

Then shut down the power once again.


Then shut down the power.

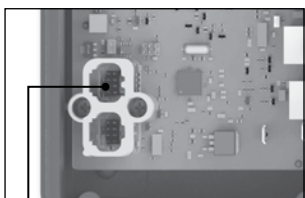

in.yj communication connector



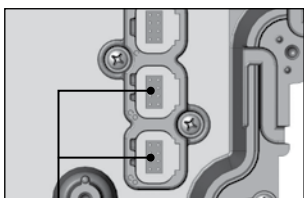


in.ye & in.yt communication connectors

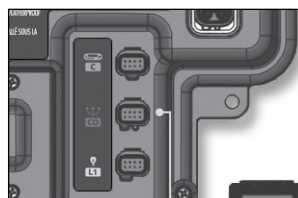

in.xe communication connector

3. Insert the in.stik in the CO connector.

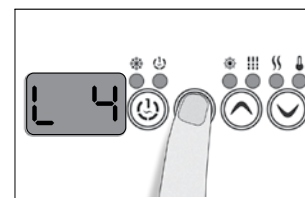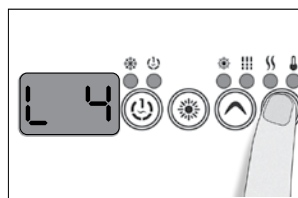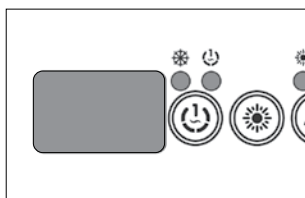

4. Apply power to the pack. At that moment the pack will upgrade itself with the content of the in.stik. During that time, the display of the keypad will be blank or will show the power-up Gecko page on the in.k800/k500.

5. Once the upgrade is completed, the display of the keypad will show low level 1 "LL 1" or the configuration selection menu (in.k800/k500). **Do not select your low level yet instead power down the spa and remove the in.stik. This step is really important.**

6. Once the in.stik removed, apply power to the spa, it will return to the low level selection menu by itself. Select the same low level you had prior to the upgrade (step one).

Use the Up/Down keys to select the desired value.

7. Then press the Program key to confirm the selection.

Note: If the keypad does not have the Program or Filter key, use the Light key instead.

Congratulations! You have successfully upgraded your spa!

