

## ELECTRONIC CONTROL BOX 20-0313

### Specifications

Rated voltage: 230VAC, 50Hz, single phase  
Rated power: 2300W  
Rated current: 10 A

Output A: Max. 900W  
Output B: Max. 2300W  
Output C: Max. 2300W

The total sum of the loads must not exceed the rated power and current.

### Dimensions & temperature

Weight: 0.9 kg  
Length: 200 mm  
Width: 150 mm  
Depth: 80 mm  
Operating temperature: 0 to 50°C  
Storage temperature: -20 to 50°C



### Important

This control box is not suitable for medical use. Follow the directions for installation and connection. We reserve the right to change the product and the specification without notice.

### Safety rules

- A. Locate the box in a dry area with good ventilation.
- B. The box must be situated at least 3 cm above the ground floor.
- C. Before cleaning, servicing, exchanging of parts or accessories or checking up on various disturbances, the mains have to be cut off.
- D. Make sure that there are no unconnected wires and cables inside the box.
- E. Cables and wires must be as short as possible inside and outside the box.
- F. The box is protection Class I. It has to be connected with cables according to the instructions from EN 60335-1 and EN 60335-2-60. It is recommended that you consult a state registered electrician. The supply cable has to be minimum type H05VV-F; 3G1.5 mm<sup>2</sup>.
- G. Keep at all time minimum 20 mm distance between high and low power cables.
- H. In order to separate the box from the mains you must install a suitable ground fault circuit interrupter with at least 3 mm break distance on each terminal in the present electrical installation.
- I. The mounting is to be made in such a way that it is not possible to touch the electric parts.
- J. The electric parts have to be mounted in such a way that they cannot fall into the bathtub.
- K. Instruments of Class I must be connected to a permanent installation.
- L. Be aware that some countries have requirements about power indication.
- M. Tighten all cable glands sufficient by means of a tool to ensure that the Ingres protection is IPX5 and to ensure that the cables are fixed in position and protected for physical traction and pressure.
- N. If not all cable outlets are used, the cable gland(s) in question has to be changed to dummy plug(s) of the same dimension to ensure that the Ingres Protection still is IPX5.
- O. This appliance is not intended for use by persons, including children with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a responsible for their safety.
- P. Children should be supervised to ensure that they do not play with the appliance.

## **ELECTRONIC CONTROL BOX 20-0313**

### **Cabling and wiring**

1. Connect 12V water level sensor to the terminal marked: LEVEL.
2. Connect touch (max. 4-function) to terminal marked: CONTROL PANEL.
3. Connect 230VAC blower to terminal marked: A (and if necessary to earth).
4. Connect pump or other 230 VAC equipment to terminal marked: B (and if necessary to earth).
5. Connect underwater light or other 230 VAC equipment to terminals marked: C (and if necessary to earth).
6. Connect control box to power, 230 VAC, via terminals marked MAINS: L1, N & EARTH.

### **Initial settings**

Blower maximum and minimum speed can be set by following steps below:

- Connect power to the control box.
- Within 60 seconds of connecting the power, press “blower up/down” & “blower on/off” simultaneously for 5 sec. The blower will start and “blower on/off” LED will flash twice.
- Press “blower up/down” to the desired minimum speed and press “blower on/off” to store the setting. “Blower on/off” LED flashes with high frequency.
- Press “blower up/down” to the desired maximum speed and press “blower on/off” to store the setting. “Blower on/off” LED will light for 2 seconds and blower will stop to indicate end of settings.

### **Functional description**

#### **Power indicator**

Pump LED will flash every 10 seconds to indicate power is connected to the system.

#### **Water level indicator**

Pump LED will flash every second to indicate adequate water in the bathtub.

#### **Function indicator**

If pump, blower or light is activated, LED for each function will light up.

#### **Dry blowing indicator**

Blower LED will flash during the automatic dry blowing program.

#### **Automatic dry blowing program**

The program will start after water level sensor indicates low level. After 20 minutes, the blower will run for 1 minute. During the dry blowing program the program can be stopped at any time by pressing the blower button. The program will only start if the pump function has been used. The dry blowing program can be disabled with a terminal strap between AUX IN and COMMON.

#### **Manual dry blowing**

It is possible to do manual dry blowing of air channels, by pressing the blower button without water in the bathtub.

#### **Pulsation**

Is activated/deactivated by pressing and holding the blower button for 3 seconds. The blower will pulsate between minimum and the current speed (see under Initial settings).

#### **Boost (stop/start of blower)**

Boost is activated by holding down the blower button for 3 seconds, when the pulsation is running.

It is stopped by pressing the blower button once.

The boost function is when the blower stops and starts with 2.5 seconds interval.


#### **A built in timer**

Switches off all functions after 30 minutes.

The water level sensor dominates all functions and will shut off everything in case of inadequate water.

# ELECTRONIC CONTROL BOX 20-0313

## Connection diagram

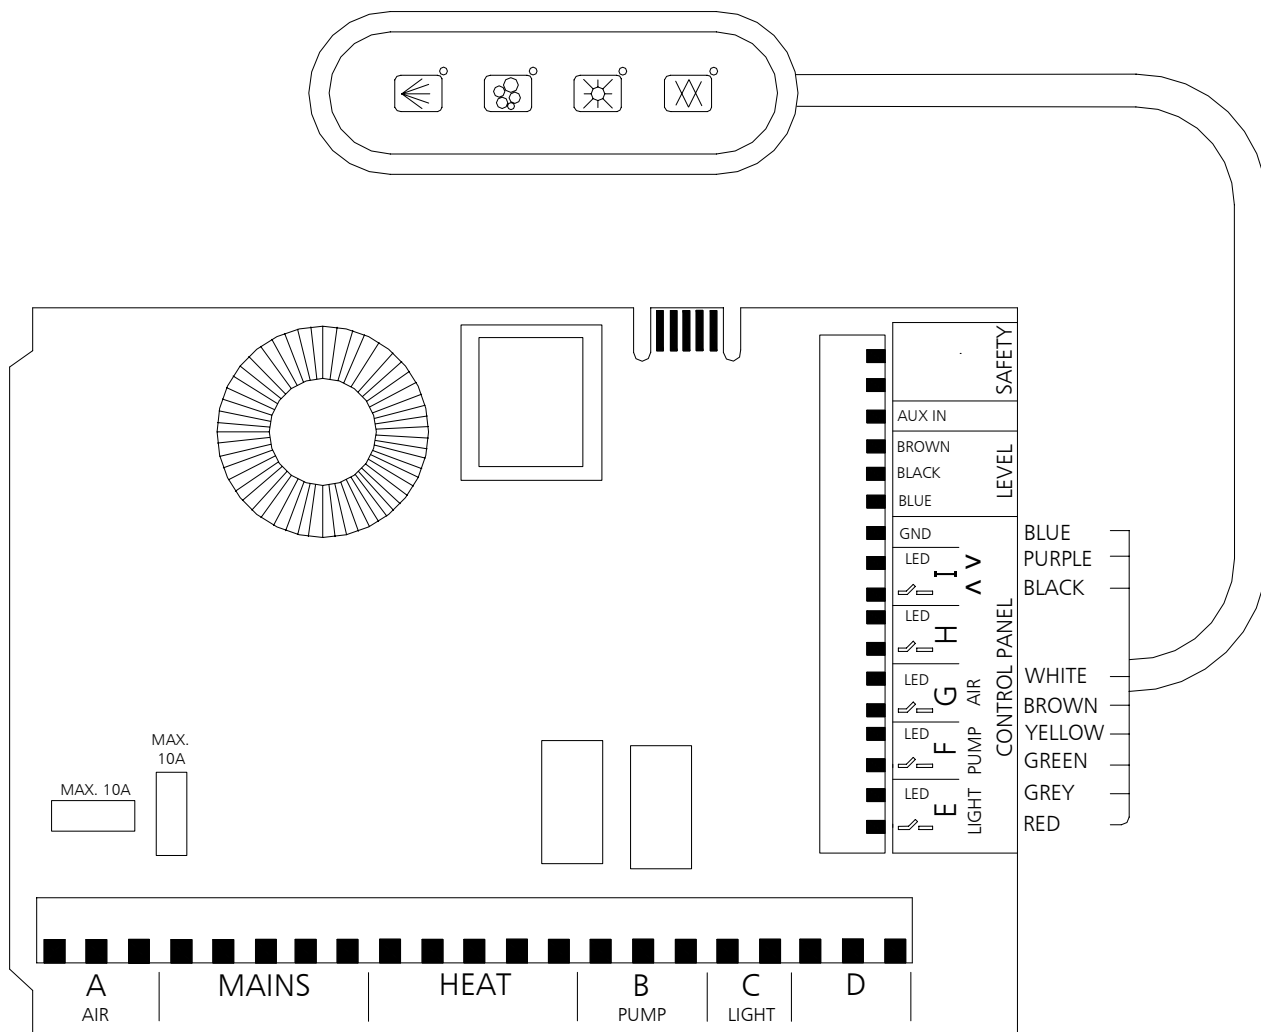

## ELECTRONISK KONTROL BOKS 20-0313

### Specifikationer

Mærkespænding: 230V, 50Hz, 1 fase.  
Mærkeeffekt: 2300 W  
Mærkestrøm: 10 A.

Udgang A: Max. 900W  
Udgang B: Max. 2300W  
Udgang C: Max. 2300W

Summen af belastninger må ikke overstige mærkeeffekt og mærkestrøm.

### Dimensioner & temperatur

Vægt: 0.9 kg  
Længde: 200 mm  
Bredde: 150 mm  
Dybde: 80 mm  
Arbejdstemperatur: 0 til 50°C  
Opbevarings temperatur: -20 til 50°C



### Vigtigt

Kontrolboksen er ikke egnet til medicinsk brug. Følg altid instruktionen under montering og tilslutning. Vi forbeholder os ret til at ændre i produktet og manualen uden varsel.

### Sikkerhedsregler

- A. Boksen anbringes på et tørt og godt ventileret sted.
- B. Boksen skal anbringes mindst 3 cm over gulvet.
- C. Strømtilførslen skal altid afbrydes før rensning, reparation, udskiftning af reserve dele eller tilbehør, og ved undersøgelse af evt. uregelmæssigheder.
- D. Der må ikke forefindes utilsluttede kabler eller ledninger inde i boksen.
- E. Kabler og ledninger skal være så korte som muligt både indeni og udenfor boksen.
- F. Kontrol boksen er henhørende i sikkerhedsklasse I, og må kun elektrisk forbindes i overensstemmelse med EN 60335-1 og EN 60335-2-60. Det anbefales, at De rådfører Dem med en autoriseret elinstallatør. Tilslutningskablet skal som minimum være type H05VV-F; 3X1,5 mm<sup>2</sup>.
- G. Der skal være en afstand på mindst 20 mm mellem stærk- og svagstrømskabler.
- H. Boksen skal adskilles fra nettet af en kontakt med en brydeafstand på min. 3 mm på hver pol.
- I. Installationen skal foretages således, at det ikke er muligt for brugeren at berøre elførende dele.
- J. Alle elektriske dele skal være således monteret, at der ikke er mulighed for at disse kan falde ned i karret.
- K. Apparater af Klasse I skal være forbundet til en fast installation.
- L. Vær opmærksom på at nogle lande har krav om synlig spændingsindikation.
- M. Spænd alle kabel forskruninger tilstrækkeligt ved hjælp af værktøj for at sikre IPX5 tæthedsgraden samt for at aflaste kablet.
- N. Hvis ikke alle kabel forskruninger anvendes, skal de udskiftes til blænd propper for at sikre IPX5 tæthedsgraden.
- O. Udstyret er ikke beregnet til brug for personer, inkl. børn, med fysiske eller mentale handicap eller personer uden erfaring eller viden i brugen. Der bør gives instruktion i brugen af installationen af hensyn til deres sikkerhed.
- P. Børn bør overvåges, for at sikre at de ikke leger med installationen.

## **ELEKTRONISK KONTROL BOKS 20-0313**

### **Kabel- og ledningstilslutninger**

1. Tilslut 12V vandstandssensor til klemmerækken mærket LEVEL.
2. Tilslut touch (maks. 4-funktionstouch) til klemmerækken mærket: CONTROL PANEL.
3. Tilslut 230 VAC blæser til klemmerækken mærket A (samt Jord om nødvendigt).
4. Tilslut pumpe eller andet 230 VAC udstyr til klemmerækken mærket B (samt Jord om nødvendigt).
5. Tilslut lampe eller andet 230 VAC udstyr til klemmerækken mærket C (samt Jord om nødvendigt).
6. Tilslut kontrol boksen til lysnettet, 230 VAC, via klemmerækken mærket MAINS: L1, N & JORD.

### **Grund indstillinger**

Blæser maksimum og minimum hastighed kan indstilles på følgende måde:

- Tilslut strøm til kontrol boksen.
- Inden 60 sekunder efter strøm tilslutning, aktiveres "blæser on/off" & "blæser op/ned" samtidig i 5 sek. Blæseren vil starte og dioden for blæser on/off vil blinke to gange.
- Hold "blæser op/ned" knappen nede, til den ønskede minimum hastighed. Tryk på "blæser on/off" for at gemme indstillingen. Efterfølgende vil dioden for "blæser on/off" blinke hurtigt.
- Hold knappen "blæser op/ned" nede, til den ønskede maksimum hastighed. Tryk på "blæser on/off" for at gemme indstillingen. Efterfølgende vil dioden "blæser on/off" lyse i 2 sekunder og blæseren stopper. Dette vil indikere, at indstillingerne er gemt.

### **Funktionsbeskrivelse**

#### **Strøm indikation**

Pumpe dioden vil blinke hver 10. sekund for at indikere, der er strøm på systemet.

#### **Vandstandsindikation**

Pumpe dioden vil blinke hvert sekund for at indikere korrekt vandstand i karret.

#### **Funktionsindikation**

Når pumpe, blæser eller lys er aktiveret vil tilhørende diode lyse.

#### **Tørblæsningsindikation**

Når tørblæsningsprogrammet kører vil dioden for blæser blinke.

#### **Automatisk tørblæsningsprogram**

Aktiveres automatisk når vandstandssensoren indikerer lav vandstand og pumpen har været i brug. Blæseren starter 20 minutter efter aktivering og kører i 1 minut. Programmet kan afbrydes ved at trykke på blæser knappen. Hvis automatisk tørblæsningsprogram ikke ønskes, kan dette undgås ved at montere en "lus" mellem AUX IN og COMMOM.

#### **Manuel tørblæsning**

Det er muligt at køre manuel tørblæsning af luft systemet, ved at aktivere blæser knappen. (Dette kræver ikke, at der har været vand i karret)

#### **Pulsering**

Pulsering af blæser aktiveres/deaktiveres ved at holde blæser knappen nede i 3 sekunder. Blæseren vil pulsere mellem den aktuelle hastighed og til minimum. (Minimum hastighed kan indstilles. Se "Grund indstillinger").

#### **Boost (stop/start af blæser)**

Boost aktiveres ved at holde blæser knappen nede 3 sekunder, når pulsering kører.

Stoppes ved et tryk på blæser knappen.

Boost funktionen er, at blæser stopper/starter med 2,5 sekunders interval.

#### **Indbygget timer**

Den indbyggede timer vil afbryde alle funktioner efter 30 minutter.

Alle udgange er vandstands afhængige og vil derfor afbrydes ved for lav vandstand.

# ELEKTRONISK KONTROL BOKS 20-0313

## Tilslutningsdiagram

