


1" AIR CONTROL INSTRUCTIONS

The correct hole size for the 1" air control is 1-3/4"

1. Before drilling hole to install the air control, make sure mounting surface is flat. This will help assure the best seal.
2. Drill one 1-3/4" hole for the air control.
3. Remove nut (#4) and gasket (#3) from air control.
4. Place silicone on backside of flange of air control body (#2) and install air control through hole in spa/bathtub.
5. Place gasket (#3) onto body (#2) on the outside of spa/bathtub.
6. Hand tighten nut (#4) onto body (#2).
7. Remove excess silicone from around flange of air control and surface of spa/bathtub.
8. Glue 1" pipe to bottom of air control.

DO NOT USE ANY TYPE OF PETROLEUM BASED LUBRICANTS ... THEY WILL DAMAGE THE PRODUCT.

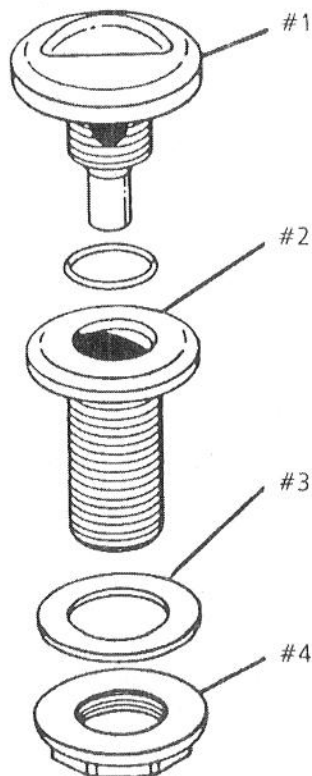

| | | |
|----|----------------------|---------|
| #1 | 1" AIR STEM ASSEMBLY | 30-2108 |
| #2 | 1" AIR BODY ASSEMBLY | 30-2107 |
| #3 | 1" GASKET | 30-3705 |
| #4 | 1" NUT | 30-3706 |