
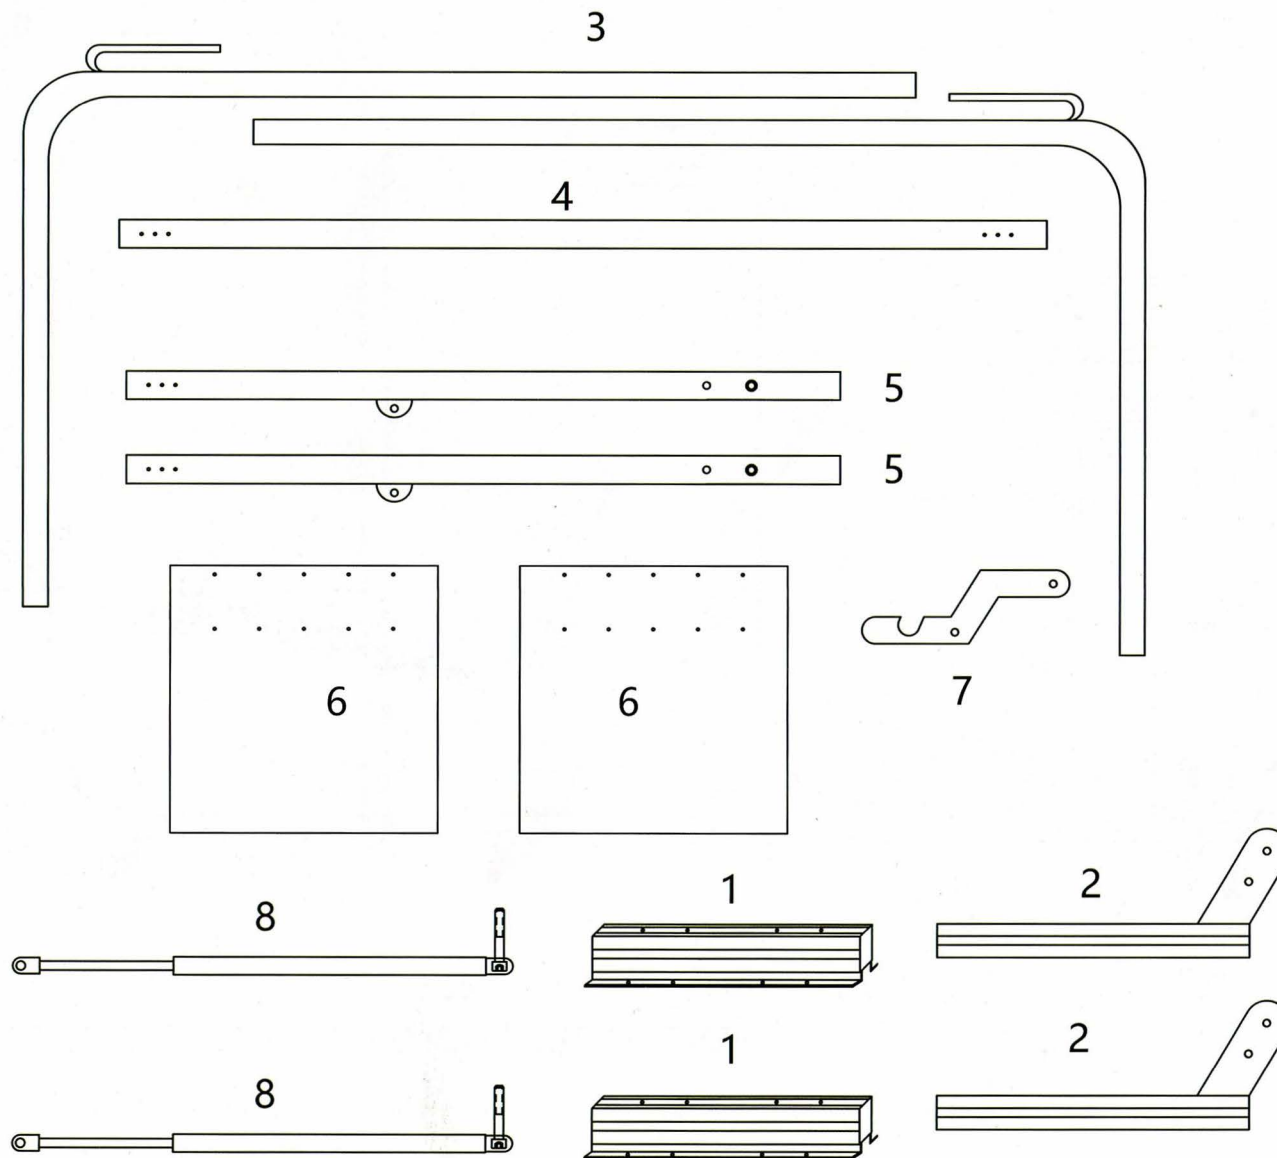



Ts-09 Installation




 M8 =2


 5*40=20

 8*75=4

 6*16=20

 5*16=22



 M6 =20

 8*13=6, 8*14=4


 42

 4


Fix part 1 on both sides of the spa with 5x40 screws.
 Part 2 fits inside Part 1 and is fixed with 5x16 screws

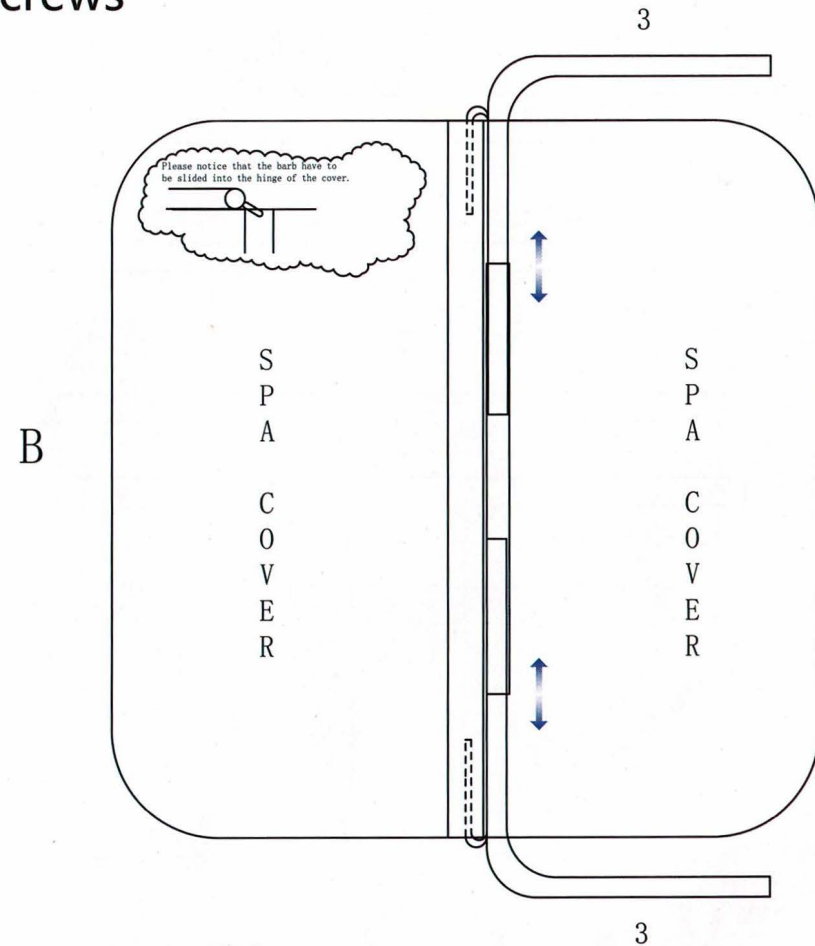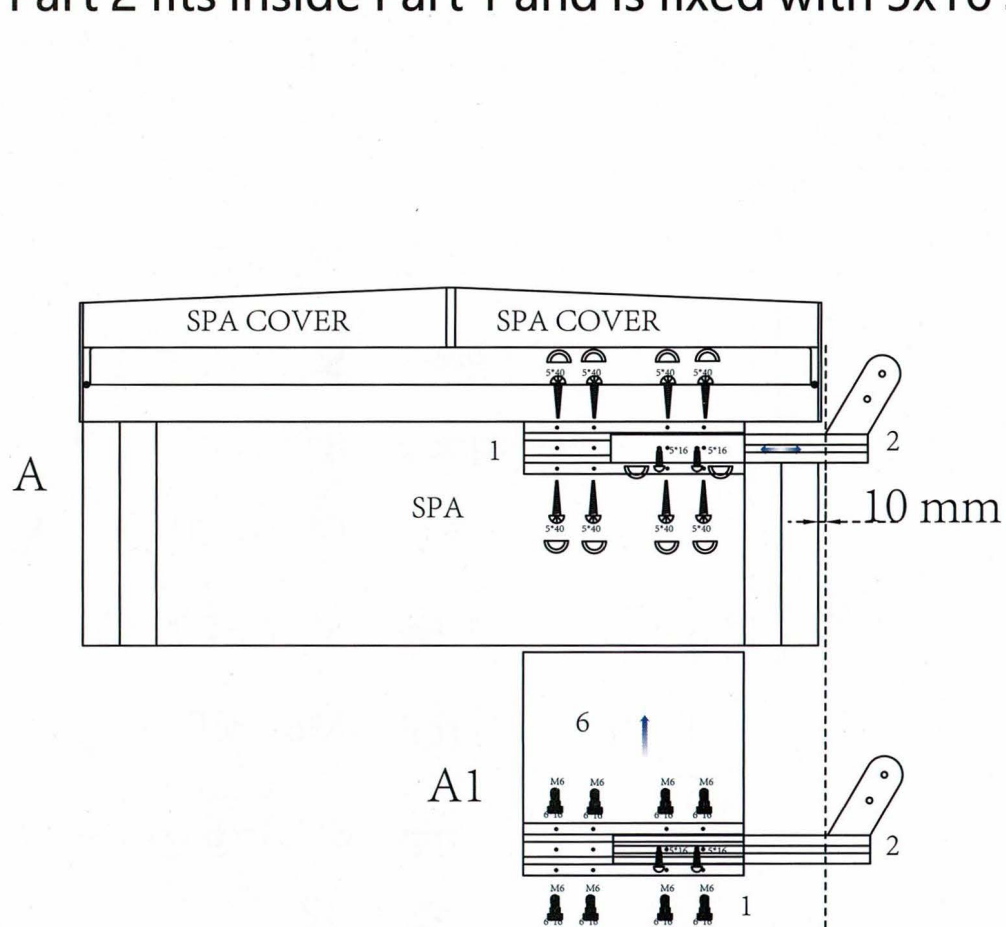

Part 4 and two parts 3 are assembled
 on the insulation cover.

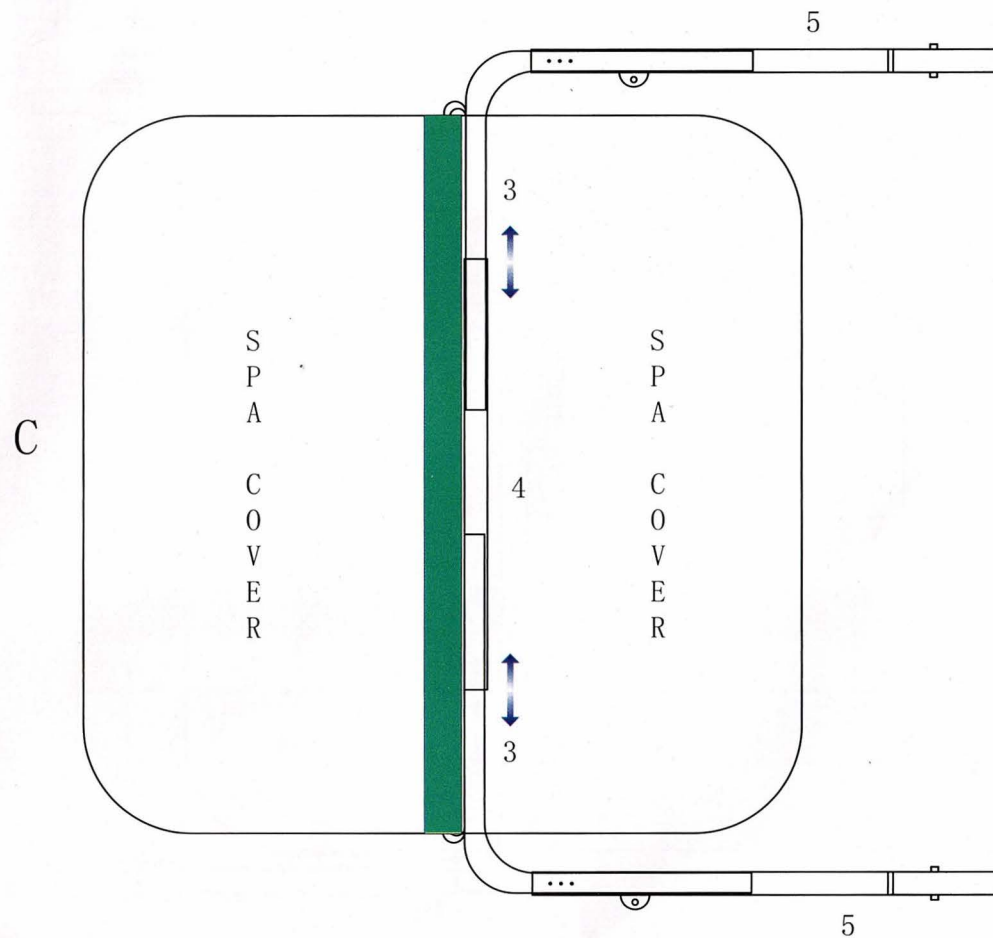


Two parts 5 are assembled separately
on both sides of part 3

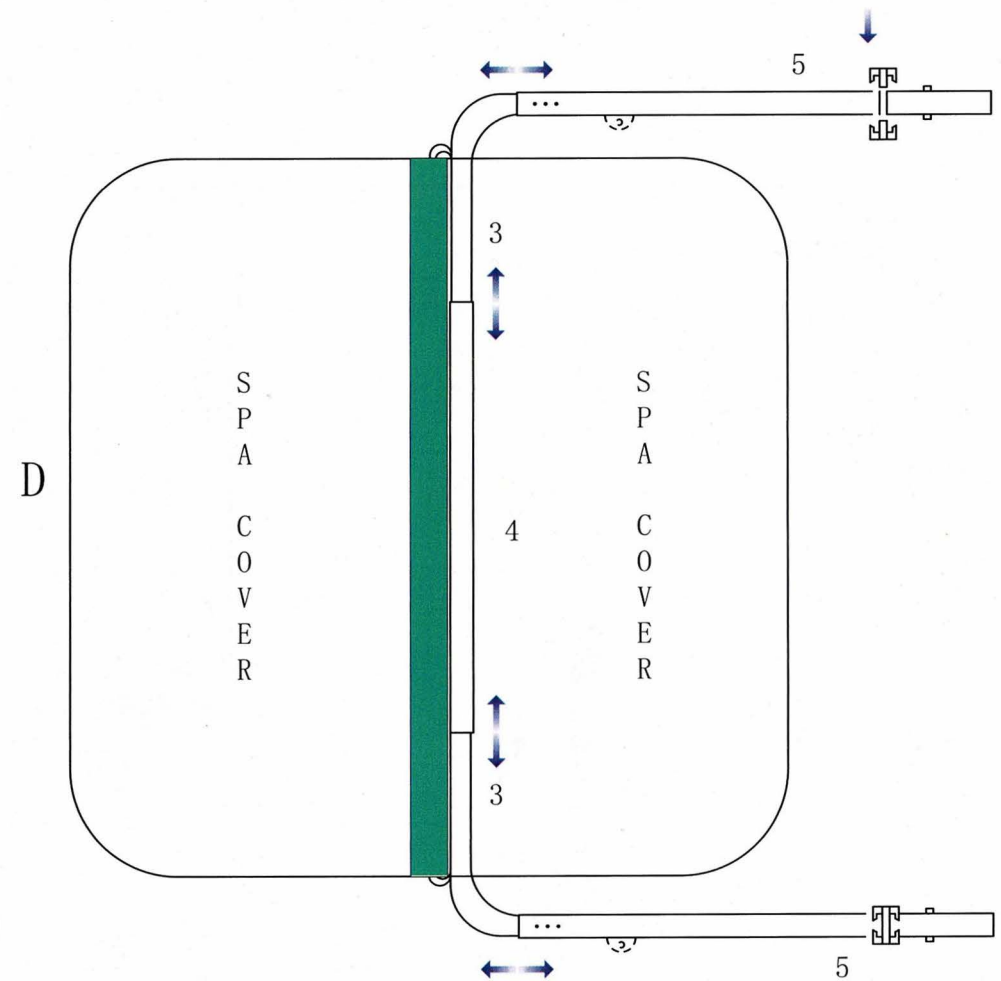


Two  assemble with part 5

Assembly of parts 5 and 2 on both sides

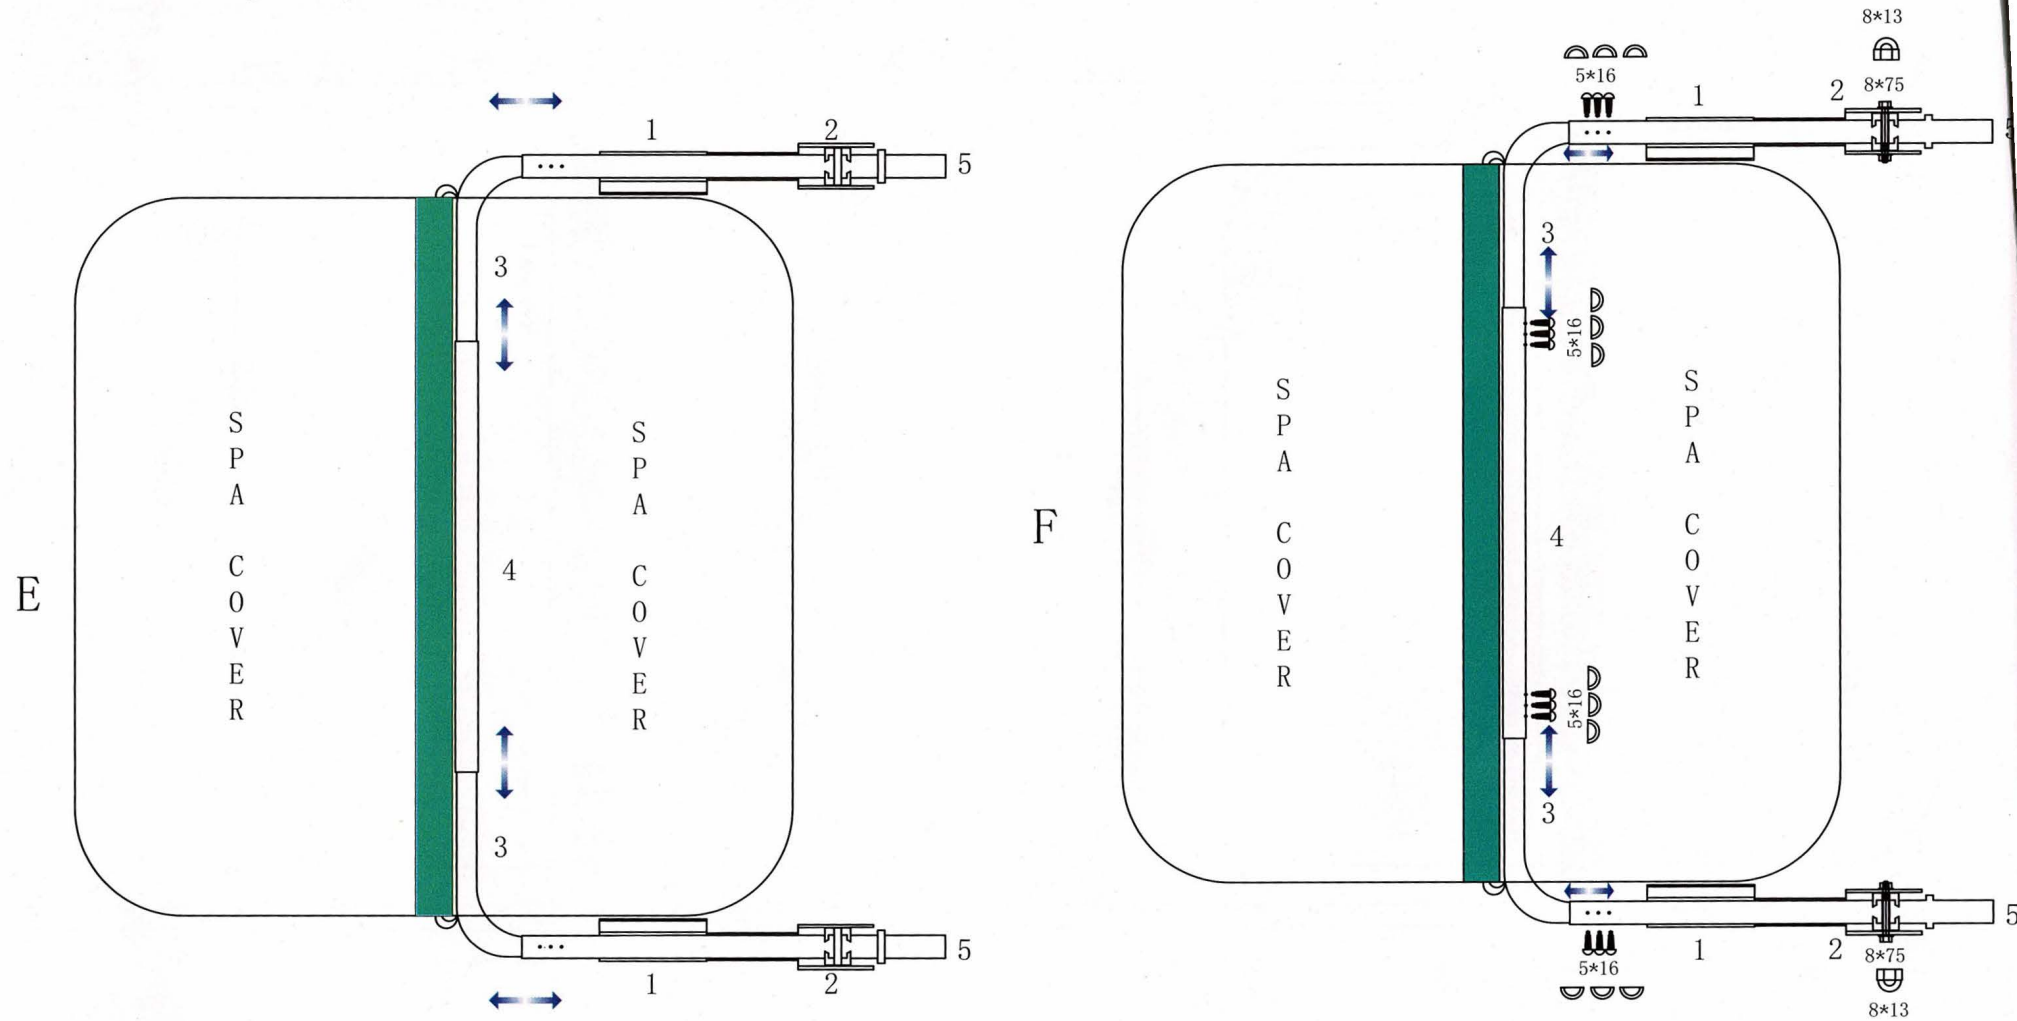

After selecting the appropriate position, fix it with screws,
and select the screw cap as shown in the figure

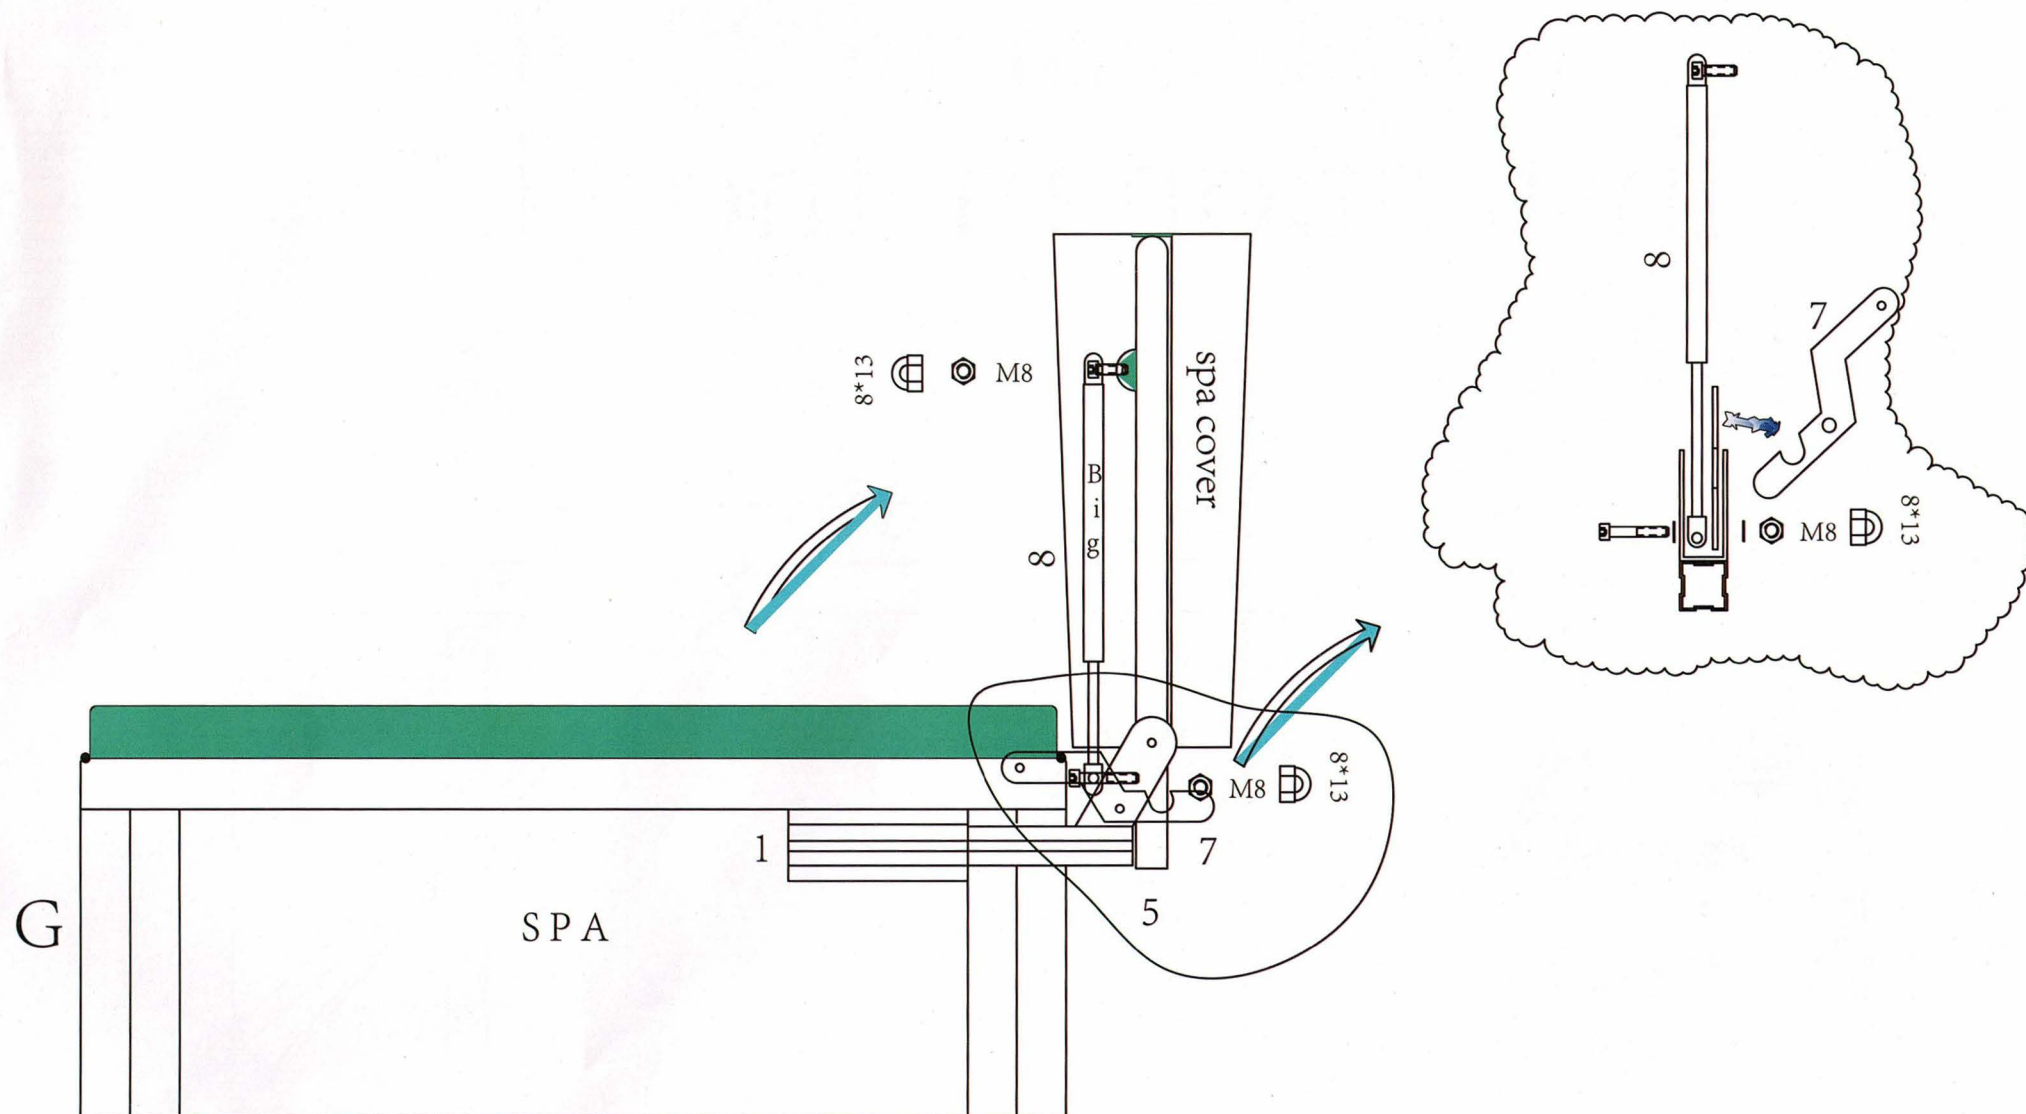

After lifting the insulation cover vertically,
Reinstall the air support rod

installtion method ll

